

# hydrapulse®

## J1939 CANbus Manual

Models covered by this manual:

EHPU (Electro-Hydraulic Power Unit)  
EHSU (Electro-Hydraulic Steering Unit)

Revision 1.1 (working copy)



HYDRAPULSE® EHPU



HYDRAPULSE® EHSU

## Reading this Document

This document is to be used as a reference tool to aid in design and integration of the Hydrapulse® EHPU (Electro-hydraulic Power Unit) and Hydrapulse® EHSU (Electro-hydraulic steering unit). The user of this document should have a basic understanding of mechanical, electrical, and hydraulic equipment. Read this document before beginning the installation of the Hydrapulse®.

Sections marked with a symbol in the left margin must be read and understood by everyone designing, installing, changing, or maintaining a Hydrapulse® Unit. The different symbols used in this document are listed below.



### WARNING

Sections labeled WARNING with a symbol in the left margin indicate a potentially hazardous situation may exist. This is of special importance and should be understood by everyone using the Hydrapulse®. Failure to comply with the recommendations can cause unintentional, and unexpected behavior of the control system. This can potentially cause death, serious injury or property damage.



### NOTICE

Sections labeled NOTICE with a symbol in the left margin indicate there is important information about the Hydrapulse®. Ignoring this could result in less than ideal operating parameters or damage to the product.

## Precautions

Work to the hydraulic system or electrical system may only be done by a trained professional that understands the complications and dangers of such systems. The Hydrapulse® EHPU & EHSU units are designed to control high power hydraulics. This industry is inherently dangerous. Care must be taken when designing, testing, maintaining, and operating such systems. Failure to do so may result in property damage, personal injury, or death.



### WARNING

**FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.**

This document and other information from Terzo Power Systems, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that all aspects of the application be analyzed, including consequences of any failure, and review the information concerning the product or system in the current product catalogue. Due to the variety of operating conditions and applications for these products or systems, the user, through his or her own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Terzo Power Systems, LLC and its subsidiaries at any time without notice.



**WARNING**

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

High Pressure Oil can cause severe injury or death! Disconnect power and relieve pressure prior to servicing the hydraulic equipment.



**WARNING**

**DO NOT USE HANDS OR FINGERS** to find leaks. Fluid under high pressure can be injected into skin causing extreme injury and serious infection. Use a piece of cardboard to locate leaks. Small high-pressure jets may be hard to see. Spilled hydraulic oil can cause burns, other accidents due to slippery conditions and can also harm the environment. Take care of all spilled oil and handle it according to your safety and environmental regulations. Never disassemble hydraulic components when the hydraulic oil is hot.

## Document Library

All documents, manuals, videos, and supporting information can be found online on our Resource Center page <https://terzopower.com/resource-center/>

Links to specific documents are found in the table below.

Description	Filename / Link
Operations and Installation Manual	<a href="#">hydrapulse_operating_installation_manual_vxx.pdf</a>
Latest firmware files	<a href="https://terzopower.com/hydrapulse-firmware/">terzopower.com/hydrapulse-firmware/</a>
2D & 3D CAD files	<a href="https://terzopower.com/hydrapulse-cad/">terzopower.com/hydrapulse-cad/</a>
Installation and operation videos	<a href="https://terzopower.com/video-library/">terzopower.com/video-library/</a>
Case Studies	<a href="https://terzopower.com/case-studies/">terzopower.com/case-studies/</a>
Datasheets	<a href="https://terzopower.com/hydrapulse-datasheets/">terzopower.com/hydrapulse-datasheets/</a>
Faq's	<a href="https://terzopower.com/hydrapulse-faqs/">terzopower.com/hydrapulse-faqs/</a>
Hydrapulse® Solution Center	<a href="https://terzopower.com/solutions-center/">terzopower.com/solutions-center/</a>

## Table of Contents

<b>Reading this Document</b>	<b>2</b>
<b>Precautions</b>	<b>2</b>
<b>Document Library</b>	<b>3</b>
<b>1 Controls</b>	<b>7</b>
<b>1.1 Operation</b>	<b>7</b>
1.1.1 Device States	7
1.1.2 Operational Control Parameters	8
1.1.3 Constant Flow Mode	8
1.1.4 Constant Pressure Mode	9
1.1.5 Process Data (Feedback to User)	9
<b>1.2 Configuration</b>	<b>10</b>
1.2.1 Read Device Configuration	11
1.2.2 Burn to EEPROM and Factory Reset	11
<b>1.3 Faults and Warnings</b>	<b>12</b>
1.3.1 Faults	12
1.3.2 Warnings	12
<b>1.4 Other Modes</b>	<b>13</b>
1.4.1 Heartbeat	13
<b>1.5 L.E.D. Status Indication</b>	<b>13</b>
<b>2 J1939 Communication</b>	<b>14</b>
<b>2.1 Network Configuration</b>	<b>14</b>
2.1.1 Network Requirements	14
2.1.2 Device Address	14
<b>2.2 PGN Mapping</b>	<b>14</b>
2.2.1 Configuration PGNs	14
2.2.2 Operational Control PGNs	18
2.2.3 Auxiliary Command PGN	19
2.2.4 Process Data PGNs	19
2.2.5 System Data PGN	21
2.2.6 Faults and Warnings PGN	21
2.2.7 Device ID PGN	22
<b>2.3 J1939 Quick Reference</b>	<b>23</b>
2.3.1 Request Specific PGNs	23
<b>3 Appendix A</b>	<b>24</b>
<b>3.1 Basic Troubleshooting</b>	<b>24</b>
3.1.1 Firmware Update	24
3.1.2 Data Export	24
<b>3.2 Device Performance</b>	<b>25</b>

Terzo Power Systems, LLC  
**Address:** 1235 Glenhaven Ct #300,  
El Dorado Hills, CA 95762  
**Phone:** 916-245-9660  
**Email:** info@terzopower.com  
**Website:** terzopower.com

The Hydrapulse® product line offers

Table 1.1: Hydrapulse® Product Line Overview

	<b>Hydrapulse® Product Line</b>			
<b>Model</b>	<i>EHPU</i>		<i>EHSU</i>	
<b>Application</b>	Hydraulic Power Unit		Steering Assist/E-Steering	
<b>Frame Size Options</b>	100, 200, 300		100, 200	
<b>Input Type and Output Power</b>	24-48VDC	Frame 100: 1.5kW	24-48VDC	Frame 100: 1.5kW
		Frame 200: 5kW		Frame 200: 5kW
	200-700VDC	Frame 100: 2.5kW	200-700VDC	Frame 100: 2.5kW
		Frame 200: 10kW		Frame 200: 10kW
		Frame 300: 30kW		
<b>Communication</b>	CAN J1939		CAN J1939	
<b>Options</b>	Various Integrated Pump options Various Integrated Reservoir options		Various Integrated Pump options Various Integrated Reservoir options	

# 1 Controls


## 1.1 Operation

The following sections describe the methods to operate both the EHPU and the EHSU models of the Hydrapulse®.

### 1.1.1 Device States

Figure 1.1 below shows the different states of the Hydrapulse.

Figure 1.1: Hydrapulse state machine

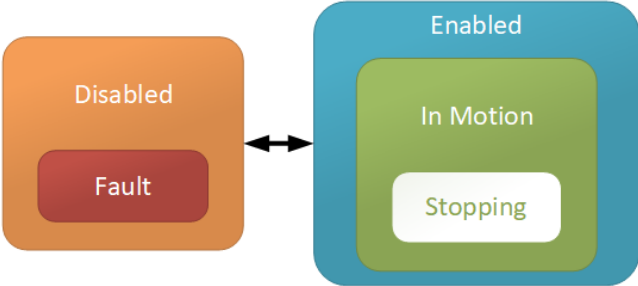

The Hydrapulse powers up in the *Disabled* state. All configuration must be done in this state. To operate the device it must be moved to the *Enabled* state. In this state, only Operational Control parameters are valid (refer below to [Section 1.1.2](#)). [Table 1.1](#) lists the device states and summarizes the transitions between the states.

Table 1.1: Hydrapulse state description

State	State Transitions	Feedback	Valid Communication	Notes
<i>Disabled</i>	to/from <i>Enabled</i> by setting <b>DEVICE ENABLE</b>	<b>ENABLE STATE</b>	All communication valid	
<i>Fault</i>	to <i>Disabled</i> by resolving fault from <i>Enabled</i> when fault is detected	<b>ANY FAULT</b>	All communication valid	Must resolve fault before moving device to <i>Enabled</i> state. Refer to <a href="#">Section 1.3</a>
<i>Enabled</i>	to/from <i>Disabled</i> by setting <b>DEVICE ENABLE</b>	<b>ENABLE STATE</b>	Only Operational Control Commands	
<i>In Motion</i>	to <i>Stopping</i> by setting <b>START/STOP</b> to stop from <i>Enabled</i> by setting <b>START/STOP</b> to start and setting a non-zero <b>COMMAND SETPOINT</b>	<b>IN MOTION</b>	Only Operational Control Commands	
<i>Stopping</i>	to <i>Enabled</i> by waiting for device to stop from <i>In Motion</i> by setting <b>START/STOP</b> to stop	<b>STOPPING</b>	Only Operational Control Commands	

### 1.1.2 Operational Control Parameters

Operational Control Parameters allow the device to transition between states and control the output of the Hydrapulse when in operation. All Operational Control Parameters are listed below in [Table 1.2](#). Refer to [Section 2.2.2](#) for J1939 details.

Table 1.2: Operational Control Parameters

Parameter	Type	Notes
<b>DEVICE ENABLE</b>	Boolean	Disables/Enables device
<b>START/STOP</b>	Boolean	Commands motion/stops motion
<b>COMMAND SETPOINT</b>	Signed Value	Updates output reference. Either flowrate or pressure base on <b>PUMP MODE</b>

### 1.1.3 Constant Flow Mode

When **PUMP MODE** is configured for constant flow, the **COMMAND SETPOINT** parameter sets the speed of the motor on the drive side of the Hydrapulse. The output of the motor will continuously adjust to maintain the set speed.

#### Acceleration & Deceleration Slew Rates

The Configuration Parameters, **ACCELERATION** and **DECELERATION** will set the slew rate for the commanded speed of the motor. They apply every time the **COMMAND SETPOINT** is updated.



### Pressure Limiting

The motor will adjust the output to maintain speed, unless the pressure reading reaches the **MAX PRESSURE** setpoint. In this case, the motor will scale back its output to maintain that pressure so as not to exceed the setting.

The **PRESSURE/FLOW LIMITING** warning indicates if the device is pressure limited.

#### *1.1.4 Constant Pressure Mode*

When **PUMP MODE** is configured for constant pressure, the **COMMAND SETPOINT** parameter sets the target pressure of the pump side of the Hydrapulse. The output of the motor will continuously adjust to maintain the set pressure.

### Flow Limiting

The motor will adjust the output to maintain pressure, unless the speed reaches the **MAX SPEED** setpoint. In this case, the motor will scale back its output to maintain that speed so as not to exceed the setting.

#### *1.1.5 Process Data (Feedback to User)*

All device states, operational settings, and measured values are fed back to the user as Process Data. **CAN SCHEDULING** configures if Process Data is broadcasted automatically and the frequency at which it is broadcasted at. [Table 1.3](#) below lists all data that is fed back to the user. The specific data format and J1939 PGN information is found in [Section 2.2.4](#).

Table 1.3: Process Data list and description

Name	Type	Description	Notes
<i>Device Operational State</i>			
ENABLE STATE	Boolean	Device disabled/enabled	
IN MOTION	Boolean	Device in motion/stopped	
STOPPING	Boolean	Device decelerating/not decelerating	
<i>Operational Settings</i>			
PUMP MODE	Boolean	Constant Flow/Constant Pressure	Reads configuration set by user
COMMAND SETPOINT	Signed Value	Target setpoint in flowrate or pressure	Reads operational parameter set by user
<i>Measured Value</i>			
FLOWRATE	Signed Value	Measured flowrate (speed) of device motor	
PRESSURE A	Unsigned Value	Measured pressure of pressure port A	
PRESSURE B	Unsigned Value	Measured pressure of pressure port B	
DC BUS VOLTAGE	Unsigned Value	Measured Bus voltage	
DEVICE TEMPERATURE	Unsigned Value	Measured internal temperature of device hardware	
FLUID TEMPERATURE	Unsigned Value	Measured temperature of hydraulic fluid	

## 1.2 Configuration

Table 1.4 below lists all configuration parameters available to the user. Configuration is valid only while the device is disabled.

Table 1.4: Configuration parameters

Name	Type	Description	Notes
PUMP MODE	2 bit	Selects constant pressure or constant flow	Refer to <a href="#">Sections 1.1.3 and 1.1.4</a>
INVERT DIRECTION	Boolean	Sets direction of rotation for motor. Reference is looking down on pump side	
INVERT PRESSURE SENSE	Boolean	Sets the high pressure port	
UNIDIRECTIONAL MODE	Boolean	Disables/enables bi-directionality	
HEARTBEAT DISABLE	Boolean	Disables/enables heartbeat functionality	Refer to <a href="#">Section 1.4.1</a>
CAN SCHEDULING	Lookup table	Sets frequency of Process Data messages	Refer to <a href="#">Table 2.5</a>
TUNING PARAMETERS	Lookup table	Selects the tuning for constant flow and constant pressure response	Select appropriate output response. Refer to <a href="#">Table 2.6</a>
MAX SPEED	Unsigned Value	Sets the maximum output speed of the motor	Two parameters are available for both directions
ACCELERATION	Unsigned Value	Sets the acceleration slew rate for constant flow	Two parameters are available for both directions
DECELERATION	Unsigned Value	Sets the deceleration slew rate for constant flow	Two parameters are available for both directions
MAX PRESSURE	Unsigned Value	Sets the maximum pressure output for constant flow mode	Two parameters are available for both directions
MAX FAULT PRESSURE	Unsigned Value	Sets the pressure threshold where the device would fault	Expressed as a percentage above <b>MAX PRESSURE</b>

### 1.2.1 Read Device Configuration

The current device configuration can be read by requesting particular J1939 PGNs. The specific PGNs are listed in [Section 2.2.7](#).

Additionally, the device ID can be read to indicate product, firmware version, and serial number of the drive side. Refer to [Section 2.2.7](#).

### 1.2.2 Burn to EEPROM and Factory Reset

To save the current device configuration on power cycle, the configuration parameters can be burned into EEPROM. This action burns all parameter settings into EEPROM.

Additionally, all parameters can be reset to factory default settings. This also performs a burn function which will overwrite any previously burned settings.

Refer to [Section 0](#) for specifics.

## 1.3 Faults and Warnings

The Hydrapulse uses a multitude of sensors to monitor the operation and environment of the device. To ensure safe operation, there are multiple faults and warnings that can occur. A fault will disable the device, while a warning will continue operation with reduced power output or performance. The following describe the different faults and warnings that can occur.

### 1.3.1 Faults

Table 1.5 below describes all the faults that may occur on the device.

Table 1.5: Hydrapulse fault list with description

Fault	Description	Clear Fault
OVER CURRENT FAULT	Main DC Bus fuse blown	Consult factory
OVER VOLTAGE FAULT	DC Bus voltage exceeds 55V	CLEAR FAULT command
UNDER VOLTAGE FAULT	DC Bus voltage under 20V	Clears when Bus voltage reaches 20V
OVER TEMPERATURE FAULT	Device temperature exceeds 125°C	CLEAR FAULT command
FLUID OVER TEMP FAULT	Fluid temperature exceeds 80°C	CLEAR FAULT command
SAFE TORQUE OFF	E-Stop open	CLEAR FAULT command
HEARTBEAT IN NOT DETECTED	No communication from host controller within 1 second (when heartbeat is enabled)	CLEAR FAULT command
OVER PRESSURE FAULT	Pressure exceeds 4000 psi or pressure set with MAX PRESSURE and MAX FAULT PRESSURE (whichever is lower)	CLEAR FAULT Command
INVERTER FAULT	Motor drive hardware failure	Consult factory
DEVICE HARDWARE FAULT	Internal hardware failure	Consult factory
ANY FAULT	Any of the above faults has occurred	

#### Clear Fault Command

Many faults require the host controller to issue the CLEAR FAULT command. Refer to [Section 2.2.3](#).



#### NOTICE

It is the responsibility of the user to ensure the cause of the fault is resolved before clearing. Failure to do so may lead to device or system failures.

### 1.3.2 Warnings

Table 1.6 below describes the warnings and associated behavior on the device.

Table 1.6: Hydrapulse warning list with descriptions

Warning	Description	Notes
<b>PRESSURE/FLOW LIMITING</b>	Constant Pressure: maximum speed is reached Constant Flow: maximum pressure is reached	<b>MAX SPEED</b> and <b>MAX PRESSURE</b> set the output thresholds. Refer to Sections “Pressure Limiting” and “Flow Limiting”
<b>TORQUE OUTPUT LIMITING</b>	Device maximum output is reached	Refer to Section “Torque Output Limiting”

### Torque Output Limiting

The maximum output of the motor is internally fixed based on the cooling requirement of the device. If the pump side is loaded such that the maximum output is reached, the device will remain operating at this max output. The **TORQUE OUTPUT LIMITING** warning indicates if the device maximum output is reached.

## 1.4 Other Modes

### 1.4.1 Heartbeat

When heartbeat is enabled (default), an Operational Control PGN must be sent at a frequency of 1 Hz (once per second) or greater when the device is enabled. If an Operational Control PGN is not received within 1 second, the device will stop motion and enter an error state.

Heartbeat can be disabled through the **HEARTBEAT DISABLE** parameter.

## 1.5 L.E.D. Status Indication

The Hydrapulse Smart Pump has an LED light ring status indicator visible during operation. This is used to visually indicate status of the Hydrapulse. For further status details such as fault codes, the user interface can give all information needed for troubleshooting and correcting issues. [Table 1.7](#) below lists the following LED pattern and description.

Table 1.7: LED description

LED Color & Pattern	Description
Flash Orange	Device is booting up
Orange	Device is in disabled state
Blue	Device is in enabled state and stopped
Green	Device is in enabled state and running
Flash Red	Fault has occurred
<i>EEPROM</i>	
White	EEPROM burn complete
<i>Firmware Update</i>	
Flash Blue	USB detected
Fast Flash Blue	Firmware update in progress
White	Firmware update complete
Fast Flash Red/Orange	Corrupt firmware

# 2 J1939 Communication

The Hydrapulse device follows the J1939 communication standard. Reference SAE J1939 documents for more details regarding the communication standard.

## 2.1 Network Configuration

### 2.1.1 Network Requirements

Baud Rate	250 kb/s (125 kb/s, 500 kb/s, 1000 kb/s contact Hydrapulse if required)
Termination Resistor	Yes (contact Hydrapulse if no resistor required)

### 2.1.2 Device Address

Upon device start-up, each device will perform an auto-assign routine to claim an available address. The device will attempt to claim address 100 (0x64). If already taken, the device will increment the address by 1 and reattempt.

## 2.2 PGN Mapping

The following sections detail the specific PGNs and their data fields transmitted and received by the Hydrapulse device.

### 2.2.1 Configuration PGNs

There are eight configuration PGNs associated with the device: four transmit (TX) and four receive (RX). The data fields in the four transmit PGNs match those in the receive PGNs. The receive PGNs are used to configure the device while the transmit PGNs are used to report back current device configuration.

Each time the device receives a configuration PGN it will respond with the associated transmitted configuration PGN. This allows the user to confirm whether configuration was successful. The device may not accept or may modify received configuration parameters if they are invalid or out of range. For example, if a **MAX SPEED+** parameter greater than 4,000 rpm, the device will cap it at 4,000. The transmit configuration PGNs can additionally be requested at any time following the J1939 protocol. Refer to [Section 2.3.1](#) for more information.

[Table 2.1](#) summarizes the configuration PGNs available on the device.

Table 2.1: Summary of Configuration PGNs

	RX PGN	TX PGN	Data
Configuration #1	0x006600	0x00F2C0	Table 2.2
Configuration #2	0x006700	0x00F2D0	Table 2.3
Configuration #3	0x006800	0x00F2E0	Table 2.4
Configuration #4	0x006900	0x00F2F0	Reserved for future use

Table 2.2: Configuration Command #1

PGN 0x006600 (RX) / 0x00F2C0 (TX)						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
PUMP MODE	2	0	00: Constant Flow (default) 01: Constant Pressure 10 & 11: Reserved			
INVERT DIRECTION	1	2	0: CCW is positive direction (default) 1: CW is positive direction			Rotation when looking down at pump
INVERT PRESSURE SENSE	1	3	0: Port A is HIGH-SIDE PRESSURE (default) 1: Port B is HIGH-SIDE PRESSURE			
UNIDIRECTIONAL MODE	1	4	0: Bidirectional mode (default) 1: Unidirectional mode			When set, unidirectional mode only allows motion in the + direction
Reserved	1	5	N/A			
HEARTBEAT DISABLE	1	6	0: Heartbeat mode is enabled (default) 1: Heartbeat mode is disabled			Refer to <a href="#">Section 1.4.1</a>
Reserved	17	7	N/A			
CAN SCHEDULING	4	24	Refer to <a href="#">Table 2.5</a>			All <i>Process Data</i> PGNs and <i>Fault/Warning</i> PGN are sent at this frequency
Reserved	4	28	N/A			
TUNING PARAMETERS	4	32	Refer to <a href="#">Table 2.6</a>			
Reserved	28	36	N/A			

Table 2.3: Configuration Command #2

PGN 0x006700 (RX) / 0x00F2D0 (TX)						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
ACCELERATION+	8	0	rpm/msec	1 rpm-msec/bit	0	Acceleration slew rate for + speeds. Refer to <a href="#">Table 2.7</a>
ACCELERATION-	8	8	rpm/msec	1 rpm-msec/bit	0	Acceleration slew rate for – speeds. Refer to <a href="#">Table 2.7</a>
DECELERATION+	8	16	rpm/msec	1 rpm-msec/bit	0	Deceleration slew rate for + speeds. Refer to <a href="#">Table 2.7</a>
DECELERATION-	8	24	rpm/msec	1 rpm-msec/bit	0	Deceleration slew rate for – speeds. Refer to <a href="#">Table 2.7</a>
MAX FAULT PRESSURE	8	32	%	1 %/bit	100%	Sets pressure fault point. Based on MAX PRESSURE+ and MAX PRESSURE-. Refer to <a href="#">Table 2.7</a>
Reserved	24	40	N/A			



Table 2.4: Configuration Command #3

PGN 0x006800 (RX) / 0x00F2E0 (TX)						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
MAX SPEED+	16	0	rpm	1 rpm/bit	0	Max speed in + direction. Unsigned 16 bit, little endian Example: 0x07D0 sets max speed of 2000 rpm. Refer to <a href="#">Table 2.7</a>
MAX SPEED-	16	16	rpm	1 rpm/bit	0	Max speed in - direction. Unsigned 16 bit, little endian. Refer to <a href="#">Table 2.7</a>
MAX PRESSURE+	16	32	psi	1 psi/bit	0	Max pressure in + direction. Unsigned 16 bit, little endian Example: 0x03E8 sets max pressure of 1000 PSI. Refer to <a href="#">Table 2.7</a>
MAX PRESSURE-	16	48	psi	1 psi/bit	0	Max pressure in - direction. Unsigned 16 bit, little endian. Refer to <a href="#">Table 2.7</a>

Table 2.5: CAN Scheduling Options

Data Bits (Hex)	Description
0x0, 0xF	Invalid Setting
0x1	All scheduled PGNs transmitted at 100 msec intervals
0x2	Transmitted at 200 msec intervals
0x3	Transmitted at 300 msec intervals
0x4	Transmitted at 400 msec intervals
0x5	Transmitted at 500 msec intervals (default)
0x6	Transmitted at 600 msec intervals
0x7	Transmitted at 700 msec intervals
0x8	Transmitted at 800 msec intervals
0x9	Transmitted at 900 msec intervals
0xA	Transmitted at 1 sec intervals
0xB	Transmitted at 1100 msec intervals
0xC	Transmitted at 1200 msec intervals
0xD	Transmitted at 1300msec intervals
0xE	PGNs only available on request

Table 2.6: Tuning Parameter Options

Data Bits (hex)	Description
0x0, 0xF	Invalid Setting
0x1	Default Tuning (default)
0x2 – 0xE	Reserved

Table 2.7: Valid Range and Default Values for Parameters

Parameter	Min	Max	Default	Example
ACCELERATION+	TBD	TBD	20	
ACCELERATION-	TBD	TBD	20	
DECELERATION+	TBD	TBD	20	
DECELERATION-	TBD	TBD	20	
MAX FAULT PRESSURE	TBD	TBD	50	
MAX SPEED+	TBD	4000	4000	
MAX SPEED-	TBD	4000	4000	
MAX PRESSURE+	TBD	4000	3000	
MAX PRESSURE-	TBD	4000	3000	

### 2.2.2 Operational Control PGNs

There are two receive (RX) Operational Control PGNs associated with the device.

Table 2.8 summarizes the Operational Control PGNs available on the device

Table 2.8: Summary of Operational Control PGNs

	RX PGN	Data
Operational Control #1	0x006400	Table 2.9
Operational Control #2	0x006500	Reserved for future use

Table 2.9: Operational Control Command

PGN 0x006400 (RX)						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
DEVICE ENABLE	1	0	0: Disable device 1: Enable device			
START/STOP	1	1	0: Command Stop 1: Command Motion			
Reserved	6	2	N/A			
COMMAND SETPOINT	16	8	rpm or psi	1 rpm/bit or 1 psi/bit	0	Signed 16 bit, little endian Pump Mode determines units. Constant Flow sets rpm/Constant Pressure sets psi
Reserved	40	24	N/A			

### 2.2.3 Auxiliary Command PGN

There is one receive (RX) Auxiliary Command PGN associated with the device. The data field is broken into Groups, where a particular group value will perform a specific operation, such as Clear Faults.

Table 2.10: Auxiliary Command

PGN 0x006A00			
Description	Length	Bit Offset	Notes
Reserved	56	0	N/A
Group 1	4	56	0000: No Function 0001: Clear Faults
Group 2	4	60	0000: No Function 0001: Burn to EEPROM 0010: Reset Factory Default Parameters

### 2.2.4 Process Data PGNs

There are five transmit (TX) Process Data PGNs associated with the device. The Process Data is used to give live feedback regarding the state of operation and sensor values. They are automatically transmitted at the frequency set by the **CAN SCHEDULING** parameter in [Table 2.2](#), or can be transmitted by request by the host controller.

[Table 2.11](#) summarizes the Process Data PGNs available on the device.

Table 2.11: Summary of Process Data PGNs

	TX PGN	Data
Process Data #1	0x00F250	Table 2.12
Process Data #2	0x00F260	Table 2.13
Process Data #3	0x00F270	Table 2.14
Process Data #4	0x00F280	Table 2.15

Process Data #5 <sup>1</sup>	0x00F290	Reserved for future use
------------------------------	----------	-------------------------

Table 2.12: Process Data #1

PGN 0x00F250						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
Time	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
PUMP MODE	2	8	00: Constant Flow 01: Constant Pressure 10 & 11: Reserved			
ENABLE STATE	1	10	0: Device Disabled 1: Device Enabled			
IN MOTION	1	11	0: Device not in motion 1: Device in motion			
STOPPING	1	12	0: Device not decelerating 1: Device decelerating			
Reserved	18	13	N/A			
COMMAND SETPOINT	16	32	rpm or psi	1 rpm/bit or 1 psi/bit	0	Signed 16 bit, little endian
Reserved	16	48	N/A			

Table 2.13: Process Data #2

PGN 0x00F260						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
Time	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
Reserved	8	8	N/A			
FLOWRATE	16	16	rpm	1 rpm/bit	0	Signed 16 bit, little endian
HIGH-SIDE PRESSURE	16	32	psi	1 psi/bit	0	Unsigned 16 bit, little endian
LOW-SIDE PRESSURE	16	48	psi	1 psi/bit	0	Unsigned 16 bit, little endian

<sup>1</sup> As PGN 0x00F290 is marked reserved for future use, it is not broadcasted with the other Process Data PGNs at this time.

Table 2.14: Process Data #3

PGN 0x00F270						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
Time	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
Reserved	8	8	N/A			
POSITION	16	16	revolutions	4 revs/bit	0	Signed 16 bit, little endian
Reserved	32	32	N/A			

Table 2.15: Process Data #4

PGN 0x00F280						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
Time	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
DEVICE TEMPERATURE	8	8	°C	1 °C/bit	0	
FLUID TEMPERATURE	8	16	°C	1 °C/bit	0	
Reserved	24	24	N/A			
DC BUS VOLTAGE	16	48	Volts	1 V/bit	0	

### 2.2.5 System Data PGN

There is one transmit (TX) System Data PGN. It is transmitted upon request from the host controller.

Table 2.16: System Data

PGN 0x00F2B0						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
Time Since Last Burn	16	0	msec	100 msec/bit	0	Time at which last 'Burn to EEPROM' command was completed. Refer to <a href="#">Table 2.10</a> .
Reserved	48	16	N/A			

### 2.2.6 Faults and Warnings PGN

There is one transmit (TX) Faults and Warnings PGN associated with the device. It is automatically transmitted at the frequency set by the **CAN SCHEDULING** parameter in [Table 2.2](#), or can be transmitted by request by the host controller.

Table 2.17: Device Faults and Warnings

PGN 0x00F240						
Description	Length	Bit Offset	Units	Scale	Offset	Notes
Time	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
OVER VOLTAGE FAULT	1	8	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
UNDER VOLTAGE FAULT	1	9	0: No Fault 1: Fault occurred			Automatically clears when bus voltage returns to proper range.
OVER TEMPERATURE FAULT	1	10	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
FLUID OVER TEMP FAULT	1	11	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
OVER PRESSURE FAULT	1	12	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
Reserved	3	13	N/A			
SAFE TORQUE OFF	1	16	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
HEARTBEAT IN NOT DETECTED	1	17	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
Reserved	6	18	N/A			
INVERTER FAULT	1	24	0: No Fault 1: Fault occurred			Consult Factory.
DEVICE HARDWARE FAULT	1	25	0: No Fault 1: Fault occurred			Consult Factory.
OVER CURRENT FAULT	1	26	0: No Fault 1: Fault occurred			Consult Factory.
Reserved	13	27	N/A			
PRESSURE/FLOW LIMITING	1	40				Continued operation with reduced output.
TORQUE OUTPUT LIMITING	1	41				Continued operation with reduced output.
Reserved	21	42	N/A			
ANY FAULT	1	63	0: No Fault 1: A Fault has occurred			Refer to above fault flags for specific fault

### 2.2.7 Device ID PGN

There is one transmit (TX) Device ID PGN. It is transmitted upon request from the host controller.

Table 2.18: Device ID

PGN 0x00F2A0			
Description	Length	Bit Offset	Notes
Device ID	8	0	0x00: HP-015-001
Firmware Version	24	8	Divided into 3 byte unsigned values. Example: 0x010001 is Version 1.0.1
Device Serial Number	16	32	Unsigned integer. Only represents last 4 digits of device serial number. Example: 0x01D8 is serial number 472.
Reserved	16	48	N/A

## 2.3 J1939 Quick Reference

The following sections are specific J1939 topics and specifications that are used by the Hydrapulse device. They are meant to be used as a quick reference. For a thorough treatment, refer to SAE J1939 documentation.

### 2.3.1 Request Specific PGNs

Some transmit (TX) PGNs on the Hydrapulse are available by request. This request is received through a reserved PGN. PGN 0x00EA00 is the request message PGN with 3 bytes of data, corresponding to the transmit PGN (TX) the host controller wishes to receive from the Hydrapulse.

PGN 0x00EA00 should be sent by the host controller with priority 6 and the three data bytes should be the requested PGN in little-endian.

# 3 Appendix A

## 3.1 Basic Troubleshooting

### 3.1.1 Firmware Update

Device firmware is field upgradable. For firmware files, visit [hydrapulse.com](http://hydrapulse.com).

#### Firmware Update Over USB

A standard flash drive is used to update firmware. The following steps are required to update firmware.

1. Load the desired .tza firmware file to the root directory of the flash drive.
2. With device powered down, install the flash drive to the USB port on the device.
3. Power up device and wait for the confirmation LED pattern:

Flashing Blue	USB detected
Fast Flashing Blue	Loading Firmware
White	Firmware update complete

**Note:** Do not rename the .tza file when loading onto the flash drive. Ensure that the file is in the root of the drive and that no other .tza files are also present.

Some versions of the Hydrapulse are equipped with a USB mini port.

If firmware is corrupted during the firmware update process (e.g. power loss during update), proceed with the instruction provided below. LED behavior may not work if firmware is corrupted.

#### Firmware Update Unsuccessful

If firmware update is unsuccessful, reload firmware using the same procedure in the previous section.

LED behavior may not operate correctly if firmware is corrupted. If LED behavior is not operating, it is recommended to power on the device with the flash drive installed and wait for 30 seconds before powering off. Then remove the flash drive and boot the device normally.

### 3.1.2 Data Export

Data export is not supported at this time. However, data logging may take place on the host controller.



## 3.2 Device Performance

Figure 3.1: HP-015-001 torque output

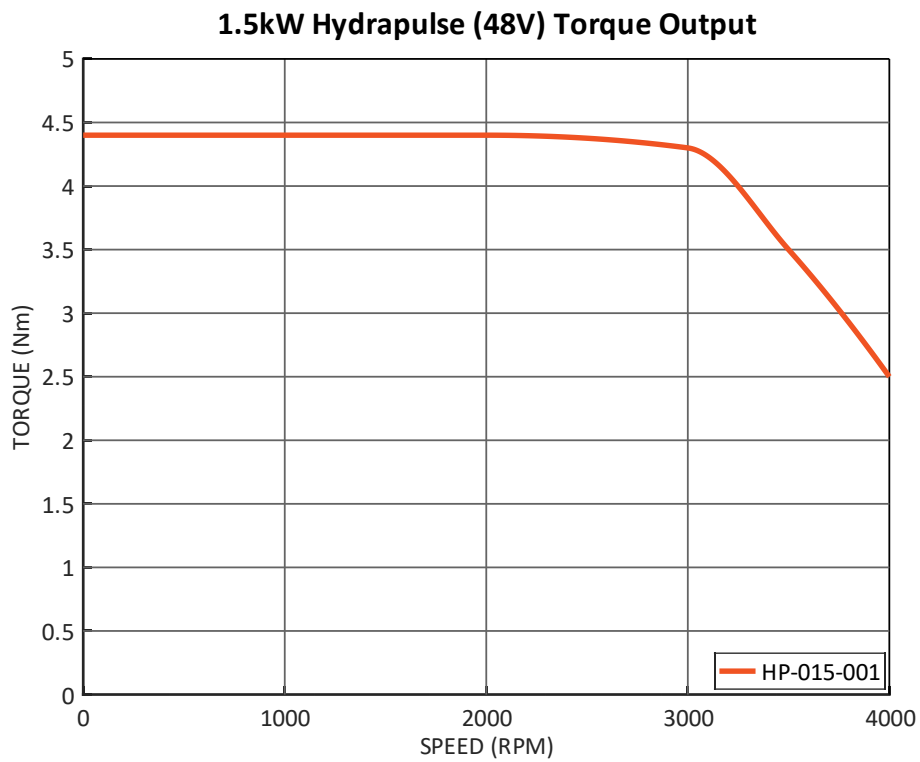


Figure 3.2: HP-015-001 with 2cc Base Pump pressure output

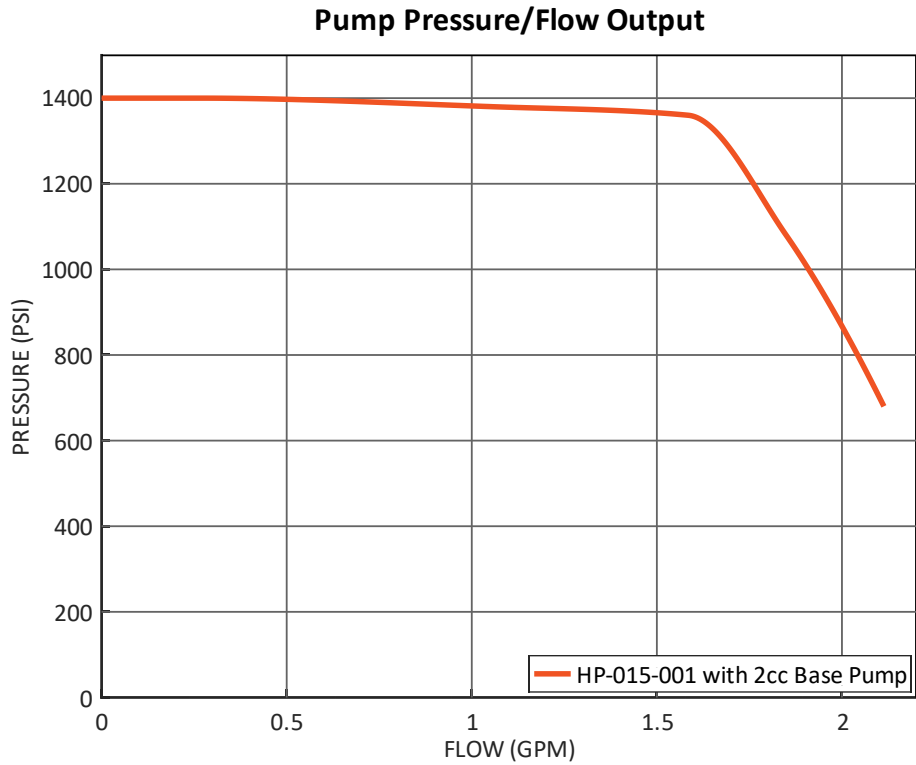


Figure 3.3: HP-015-001 power output (with Base Pump options)

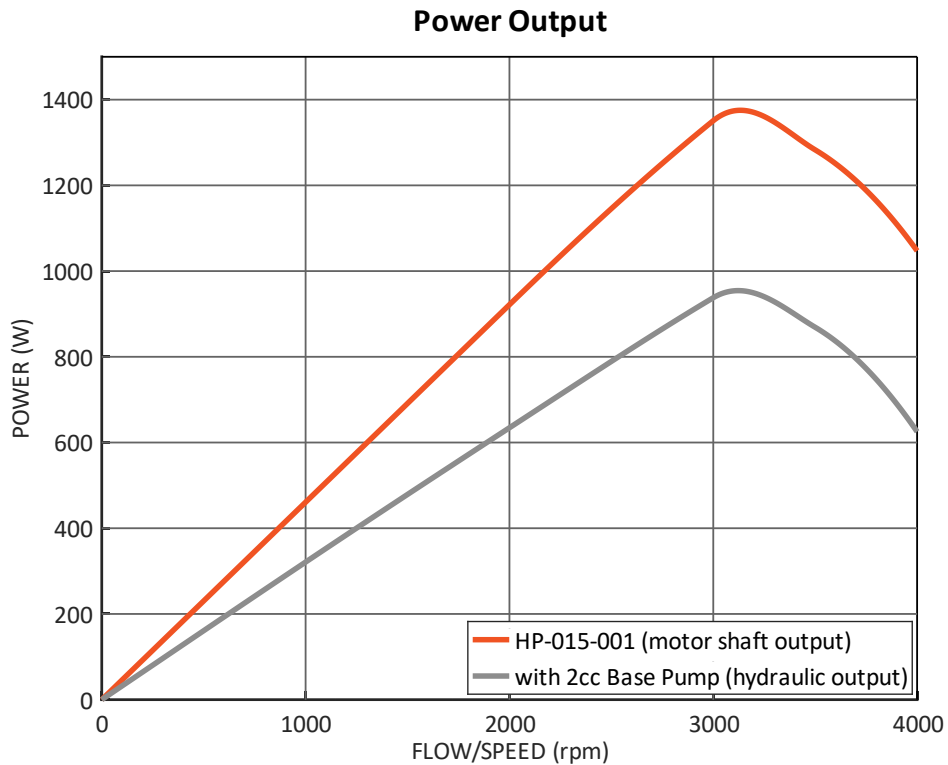


Figure 3.4: HP-015-001 efficiency (with Base Pump options)

