

11/2021  
VERSION 1.0

hydrapulse®

# USER MANUAL

## OPERATION, INSTALLATION, & TROUBLESHOOTING

MODELS COVERED UNDER THIS MANUAL:

**EHSU** ELECTRO-HYDRAULIC STEERING UNIT

**EHPU** ELECTRO-HYDRAULIC POWER UNIT



## READING THIS DOCUMENT

This document is to be used as a reference tool to aid in design and integration of the Hydrapulse® products listed above. The user of this document should have a basic understanding of mechanical, electrical, and hydraulic equipment. Read this document before beginning the installation of the Hydrapulse.

Sections marked with a symbol in the left margin must be read and understood by everyone designing, installing, changing, or maintaining a Hydrapulse Unit. The different symbols used in this document are listed below.



**WARNING!**

**SECTIONS LABELED WARNING WITH A SYMBOL IN THE LEFT MARGIN INDICATE A POTENTIALLY HAZARDOUS SITUATION MAY EXIST. THIS IS OF SPECIAL IMPORTANCE AND SHOULD BE UNDERSTOOD BY EVERYONE USING THE HYDRAPULSE. FAILURE TO COMPLY WITH THE RECOMMENDATIONS CAN CAUSE UNINTENTIONAL, AND UNEXPECTED BEHAVIOR OF THE CONTROL SYSTEM. THIS CAN POTENTIALLY CAUSE DEATH, SERIOUS INJURY OR PROPERTY DAMAGE.**



**NOTICE!**

**SECTIONS LABELED NOTICE WITH A SYMBOL IN THE LEFT MARGIN INDICATE IMPORTANT INFORMATION ABOUT THE HYDRAPULSE. IGNORING THIS COULD RESULT IN LESS THAN IDEAL OPERATING PARAMETERS OR DAMAGE TO THE PRODUCT.**

## PRECAUTIONS

Work to the hydraulic system or electrical system may only be done by a trained professional who understands the complications and dangers of such systems. The Hydrapulse units are designed to control high power hydraulics. This industry is inherently dangerous. Care must be taken when designing, testing, maintaining, and operating such systems. Failure to do so may result in property damage, personal injury, or death.



**WARNING!**

**FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.**

This document and other information from Terzo Power Systems, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that all aspects of the application be analyzed, including consequences of any failure, and review the information concerning the product or system in the current product catalogue. Due to the variety of operating conditions and applications for these products or systems, the user, through his or her own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Terzo Power Systems, LLC and its subsidiaries at any time without notice.



**WARNING!**

**THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. FOR MORE INFORMATION, VISIT [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV).**



**WARNING!**

**HIGH PRESSURE OIL CAN CAUSE SEVERE INJURY OR DEATH! DISCONNECT POWER AND RELIEVE PRESSURE PRIOR TO SERVICING THE HYDRAULIC EQUIPMENT.**

**DO NOT USE HANDS OR FINGERS TO FIND LEAKS. FLUID UNDER HIGH PRESSURE CAN BE INJECTED INTO SKIN CAUSING EXTREME INJURY AND SERIOUS INFECTION. USE A PIECE OF CARDBOARD TO LOCATE LEAKS. SMALL HIGH-PRESSURE JETS MAY BE HARD TO SEE. SPILLED HYDRAULIC OIL CAN CAUSE BURNS AND OTHER ACCIDENTS DUE TO SLIPPERY CONDITIONS AND CAN ALSO HARM THE ENVIRONMENT. TAKE CARE OF ALL SPILLED OIL AND HANDLE IT ACCORDING TO PROPER SAFETY AND ENVIRONMENTAL REGULATIONS. NEVER DISASSEMBLE HYDRAULIC COMPONENTS WHEN THE HYDRAULIC OIL IS HOT.**

## DOCUMENT LIBRARY

All documents, manuals, videos, and supporting information can be found online on our Resource Center page <https://TerzoPower.com/resource-center>

THIS PAGE LEFT BLANK INTENTIONALLY

# CONTENTS

<b>1. Product Overview</b>	<b>1</b>
Model Sizes and Power Levels . . . . .	1
Hydrapulse Product Family Matrix . . . . .	2
<b>2. Quickstart Guide</b>	<b>3</b>
<b>3. Mechanical Installation</b>	<b>6</b>
Mounting Orientation . . . . .	6
Flooded Suction . . . . .	6
Vibration Isolation . . . . .	6
Mounting Locations . . . . .	6
<b>4. Wiring Installation</b>	<b>7</b>
Communications and Control Wiring . . . . .	7
Low Voltage Connector - Device Side . . . . .	7
Mating Low Voltage Connector - Cable Side . . . . .	7
Signal Descriptions . . . . .	8
Control Power . . . . .	8
CAN Communications . . . . .	8
Internal Termination Resistor . . . . .	8
E-Stops (Safe Torque Off) . . . . .	9
Grounding . . . . .	10
Chassis Reference Grounding (EV/HEV applications) . . . . .	10
Earth Grounding (Stationary applications) . . . . .	10
Bus Voltage and Rated Speed . . . . .	11
High Power Input . . . . .	11
Low Voltage Models (24-48vDC) . . . . .	11
High Voltage Models (200-800vDC) . . . . .	11
Fuse Sizing . . . . .	11
Pre-Charge Capacitance . . . . .	12
<b>5. Controls</b>	<b>13</b>
Firmware Updates . . . . .	13
Device States . . . . .	13
Control Parameters . . . . .	14
Modes of Operation - Constant Flow Mode . . . . .	14
Modes of Operation - Constant Pressure Mode . . . . .	15
Process Data (Feedback to User i.e. broadcast messages) . . . . .	15
Configuration Parameters . . . . .	15
Read Device Configuration . . . . .	15
Burn to EEPROM and Factory Reset . . . . .	16
Faults and Warnings Overview . . . . .	16
List of Faults . . . . .	16
List of Warnings . . . . .	17
Torque Output Limiting . . . . .	17
Heartbeat Mode . . . . .	17
L.E.D. Status Indication . . . . .	17



6. J1939 Communications

18

Network Configuration . . . . .

18

PGN Mapping . . . . .

18

Configuration Command PGNs . . . . .

18

Operational Control PGNs . . . . .

21

Auxiliary Command PGNs . . . . .

21

Process Data PGNs . . . . .

21

System Data PGN . . . . .

23

Faults and Warnings PGN . . . . .

23

Device ID PGN . . . . .

24

J1939 Quick Reference . . . . .

24

Request Specific PGNs . . . . .


24

7. FAQ's

25

# 1. PRODUCT OVERVIEW

All Hydrapulse product offerings (regardless of model) incorporate our integrated permanent magnet motor, motor drive control electronics (inverter), and controller software specifically designed for advanced hydraulic systems.

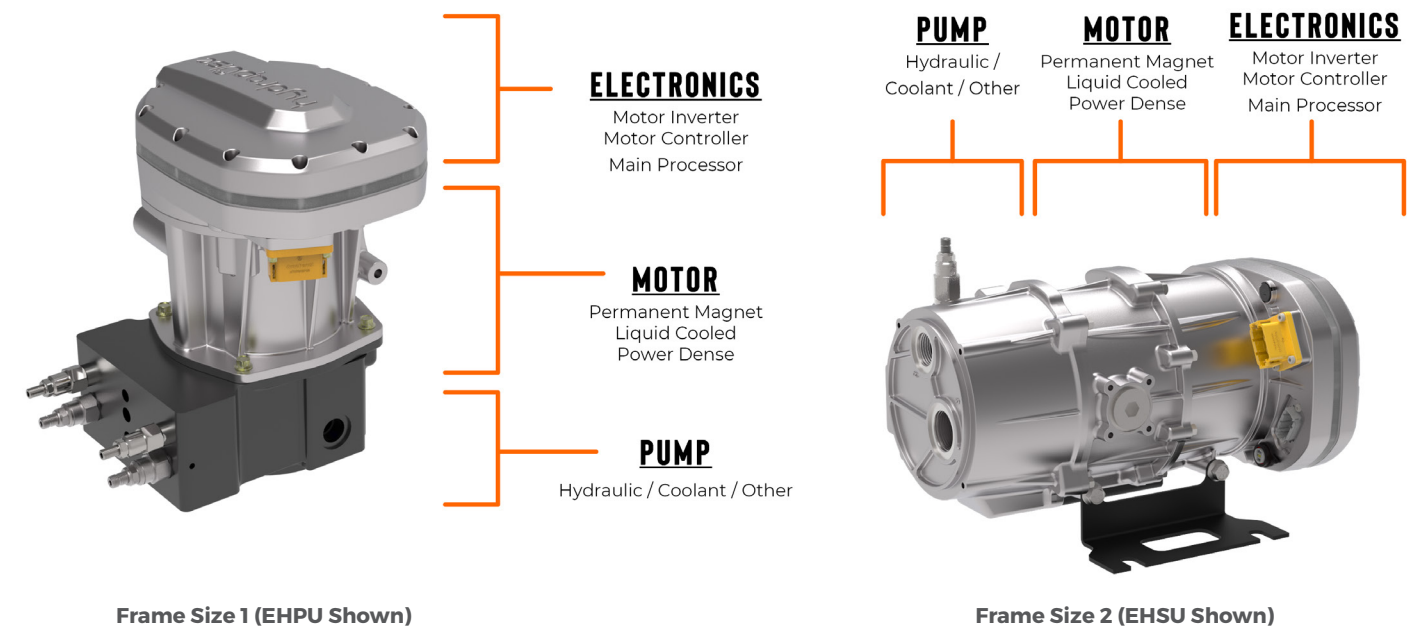

## ELECTRONICS

Each Hydrapulse unit has a powerful suite of electronic features that enable digital control of the hydraulic flow and pressure and provides a "smart pump" for all types of hydraulic applications. A processor "closes the loop" with onboard pressure and current sensors to maintain pressure and flow setpoints. Other features include data logging, temperature sensing, LED indicators and a software-configurable CAN Termination Resistor to provide easier integration into systems.

## MOTOR

Inside each unit is a permanent magnet, high efficiency synchronous motor that allows near instantaneous response to pressure and flowrate commands. Typical response time from zero to full flow or pressure is under 100ms. These motors are liquid cooled for peak performance and power density utilizing our innovative and proprietary lower pressure return oil cooling system that is internal to each Hydrapulse unit.

## PUMP

The pump section of each Hydrapulse can be numerous different types of pumps and drives. Each application may demand a different pump displacement and/or pump type so while we have several standard pumps, there is also the ability to customize this part of the Hydrapulse.

## MODEL SIZES AND POWER LEVELS

The Hydrapulse product family comes in three basic sizes: Frame Size 1, Frame Size 2, and Frame Size 3. A large number of power levels, voltages, and pump displacements are available from these three frames sizes. Please contact our engineering team if you need a particular power output that is not a standard item.

The table below shows the product matrix, power levels, and sizes available for our three frame sizes.

[TerzoPower.com](http://TerzoPower.com) | [Info@TerzoPower.com](mailto:Info@TerzoPower.com) | 916-245-9660


# HYDRAPULSE PRODUCT FAMILY MATRIX

**EHSU**  
Unidirectional  
Gear or Vane Pump  
ELECTRO-HYDRAULIC STEERING UNIT


**EHPU-U**  
Unidirectional  
Gear or Piston Pump  
ELECTRO-HYDRAULIC POWER UNIT

**EHPU-B**  
Bi-directional  
Gear Pump or Piston  
ELECTRO-HYDRAULIC POWER UNIT

**FRAME SIZE 1**  
Up to Approx. 3kw

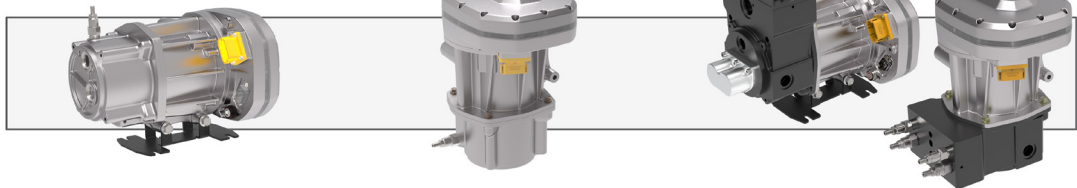


**FRAME SIZE 2**  
Approx. from 5 kw  
to 10kw

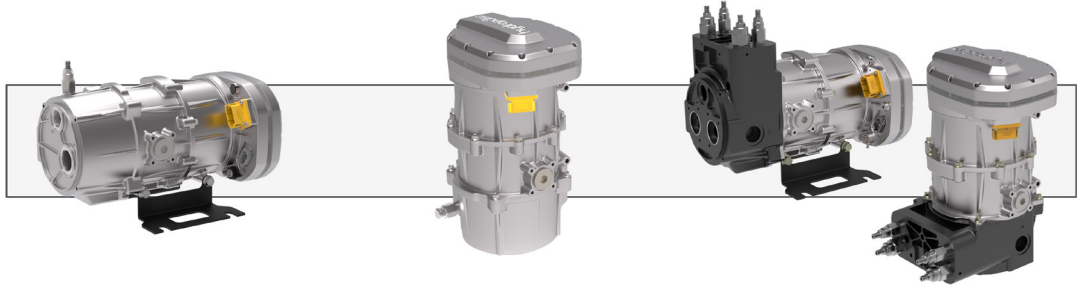

**EHPU-U**  
Unidirectional  
Gear or Piston Pump  
ELECTRO-HYDRAULIC POWER UNIT

**EHPU-B**  
Multi-directional  
Gear or Piston Pump  
ELECTRO-HYDRAULIC POWER UNIT

**FRAME SIZE 3**  
Approx. from 20 kw  
to 90kw

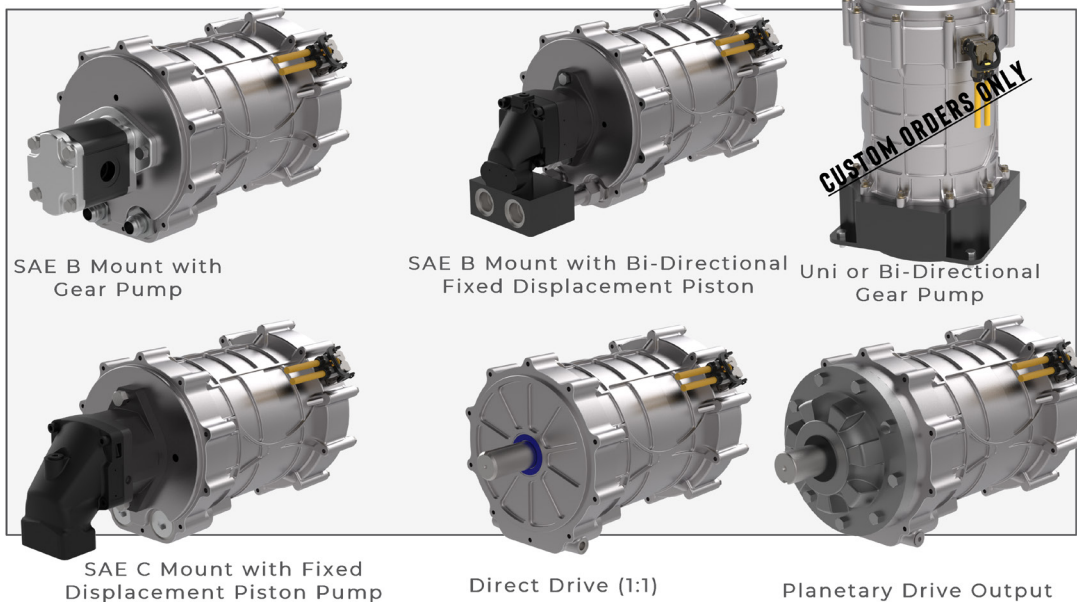

## 2. QUICKSTART GUIDE

### QUICK START GUIDE OVERVIEW

The following section describes how to quickly begin controlling both the EHPU and the EHSU models of the Hydrapulse.




**WARNING!**

**OPERATION OF THIS DEVICE INVOLVES HIGH VOLTAGE. EXTREME CARE MUST BE TAKEN TO AVOID INJURY.**

**STEP 1** - Fix the Hydrapulse unit to a stable work surface.

**STEP 2** - Connect the suction (S) port to your hydraulic reservoir. A flooded suction orientation is preferred to ensure adequate oil to the pump when initially operating the unit.

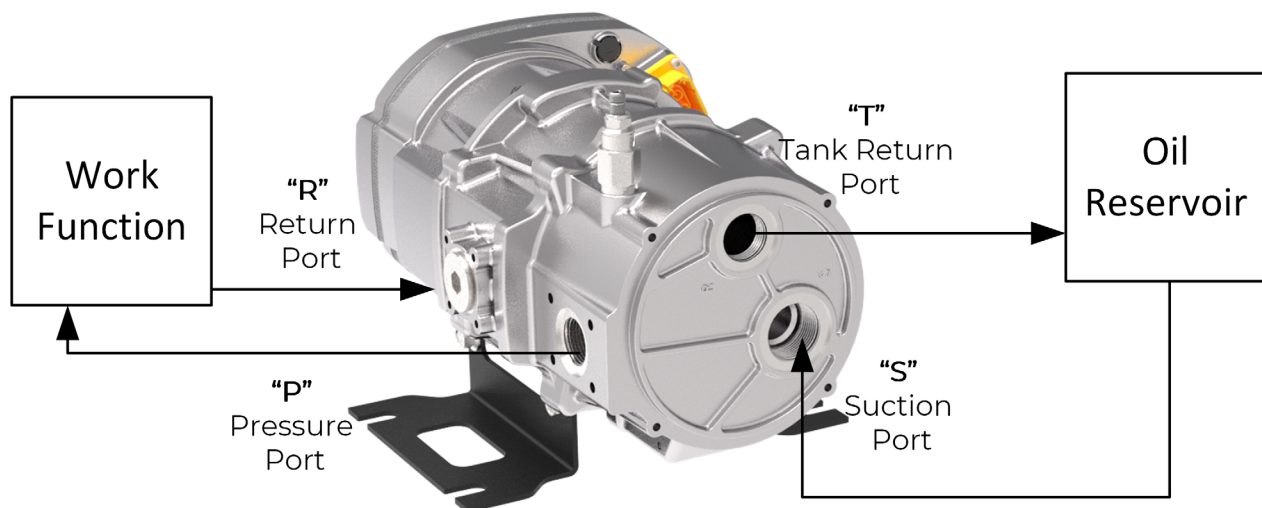

**STEP 3** - Connect the Hydrapulse output pressure port (P) to the inlet of your desired hydraulic work function, such as a manifold, steering box, cylinder, or hydraulic motor.

**STEP 4** - Connect the Hydrapulse return port to the return side of the hydraulic function.

**STEP 5** - Connect the "return to tank" port of the Hydrapulse to the hydraulic reservoir.


**STEP 6** - Connect pin 1 of the low voltage connector to a 12v power supply, and pin 2 of the connector to ground. If E-STOP functionality is desired, connect pins 5 and 6 to the E-STOP circuit described in section 4. If E-STOP functionality is not necessary, the pins may be connected directly to the 12v power supply with pin 1.

**STEP 7** - Connect the CAN HIGH (Pin 3) and CAN LOW (Pin 4) pins to the appropriate pins on your CANBUS controller.

**STEP 8 - While the table is not energized,** connect the high voltage connector (ATHP062S25EL-S2) to a 200-800vdc high voltage power supply or battery with the pinout below.

**STEP 9 -** To turn on the Hydrapulse, power on the 12v power supply. The LEDs will begin to flash RED. On the CANBUS, the "Process Data" PGNS will broadcast from the unit in 100ms intervals from address 0x64.


**STEP 10 -** The Hydrapulse will now be in the "disabled" state, and will have an undervoltage fault active on the fault PGN. Configuration parameter PGNS may be sent to change settings such as pressure/flow mode, max speed, and max pressure as described in Section 6 J1939 Communications. Configuration PGNs are only accepted when the device is disabled.

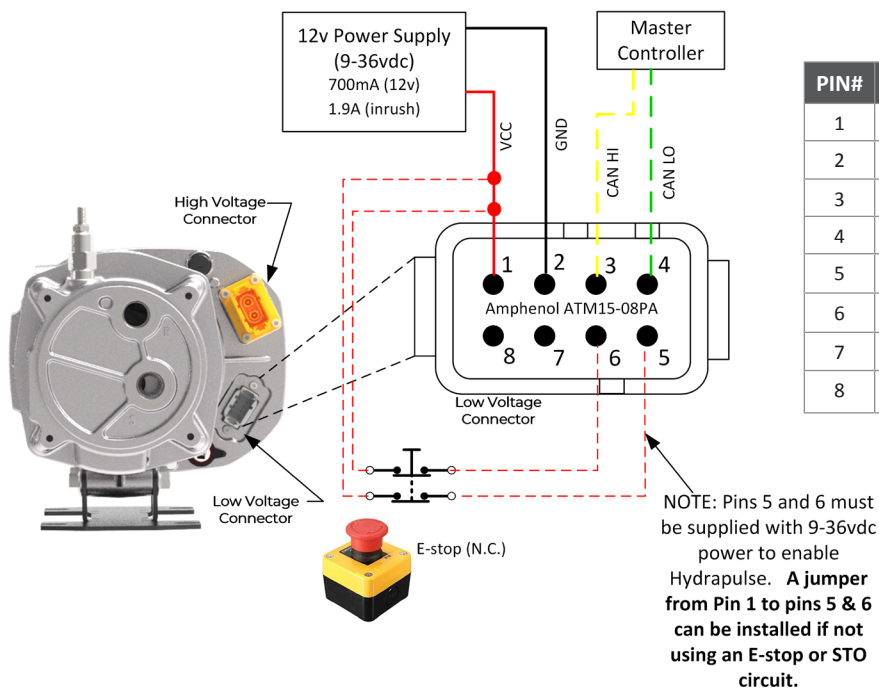

**Amphenol ATM Connector Pinout  
(All Frame Sizes)**


PIN#	NAME	DESCRIPTION
1	VCC	9-36vDC control power
2	GND	9-36vDC control ground
3	CAN-H	CAN High
4	CAN-L	CAN Low
5	STO-0 (E-STOP 0)	E-Stop 0
6	STO-1 (E-STOP 1)	E-Stop 1
7	HVIL-0	High Voltage Interlock Loop - 0
8	HVIL-1	High Voltage Interlock Loop - 1

**Mating Connector  
(Cable Side)**

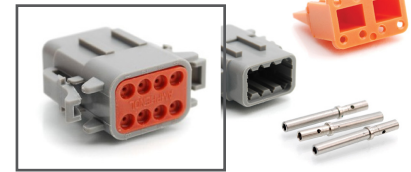

ATM06-08SA Plug  
(with wedge & contacts shown)

**STEP 11 -** Energize the high voltage cable through a **current limited pre-charge process limited to 1 amp** (refer to page 12 for additional information). Once the bus voltage rises above the undervoltage threshold, the undervoltage fault will automatically resolve itself and the LEDs will turn to a solid orange color.

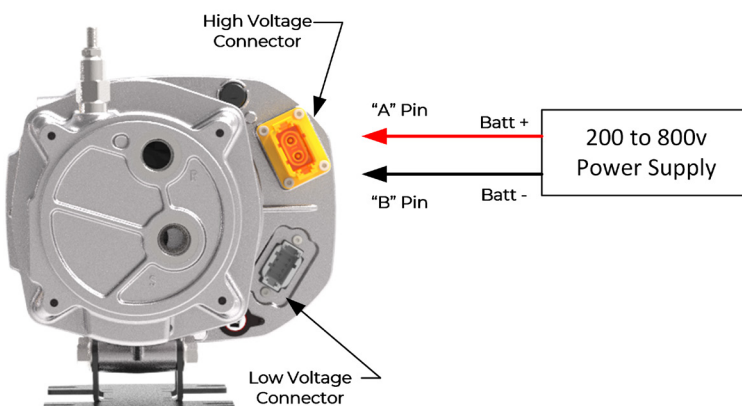

**Mating High Voltage Connector  
(Cable Side)**



ATHP062S25EL-S2

PIN#	NAME	DESCRIPTION
A	BATT +	200-800 vdc input
B	BATT -	200-800 vdc negative

**STEP 12** - Send a "1" to the first bit of the operational control command PGN. All other bits should be sent with a "0" (PGN 0x006400 by default). The device will enter the enabled state and the LEDs will change to a solid blue color.

**STEP 13** - While the unit is enabled, a new operational control PGN must be sent every 500ms to avoid triggering the heartbeat fault. The heartbeat fault can be disabled as described in Section 6 J1939 Communications.

**STEP 14** - Change the start/stop bit to "1" and send the desired motor RPM to the command setpoint bytes of the operational control command PGN. By default, the command setpoint represents an RPM command. The setpoint may be changed to a pressure command by sending the respective message to the Pump Mode parameter in the configuration parameter #1 PGN.

The unit will update the internal command setpoint and begin accelerating towards the commanded speed or pressure. Listen for the pump to prime and purge the air from the system. Depending on reservoir size it may be necessary to stop the pump and fill the reservoir to avoid running the hydraulic pump dry.

If there are any unexpected noises, send a "0" to the enable bit, remove high voltage power, and inspect suction line for proper priming.

**STEP 15** - The RPM and pressure feedback will be broadcast on the "process data 2" PGN

**STEP 16** - Send a command setpoint of "0" to bring the pump to a stop, followed by sending a "0" to the enable bit after the pump has finished decelerating.

#### Operational Control Commands

PGN 0x006400 (RX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
DEVICE ENABLE	1	0	0: Disable Device 1: Enable Device			
START/STOP	1	1	0: Command Stop 1: Command Motion			
RESERVED	6	2	N/A			
COMMAND SETPOINT	16	8	RPM or PSI	1 RPM/bit or 1 PSI/bit	0	Signed 16 bit, little endian Pump Mode determines units. Constant Flow sets RPM/Constant Pressure sets PSI
RESERVED	40	24	N/A			



## 3. MECHANICAL INSTALLATION

The following sections detail the mechanical installation requirements and connections for the Hydrapulse product line. Except where explicitly stated, all information applies to all EHPU and EHSU models.

### MOUNTING ORIENTATION

All Hydrapulse units can be physically mounted in any orientation but depending on the pump type, reservoir location, other factors, it may be necessary to mount the unit in a specified position and/or direction. For mounting orientations that are not shown in each datasheet, please contact engineering prior to purchase with questions and application specifications.

### FLOODED SUCTION

It is always best practice to have any hydraulic pump installed with a flooded suction. While there are many applications that allow a non-flooded suction, it's always best to check with our engineering support prior to system design or purchase.

### VIBRATION ISOLATION

Vibration isolators for mounting of the Hydrapulse units are recommended but not required for standard mounting configurations. If we recommend two-piece mounting isolators similar to the [LORD CB-2200 Series](#). Recommended sizes are shown in the **Table 3-1** below.



#### NOTICE!

**IF VIBRATION ISOLATORS ARE INSTALLED WITH THE HYDRAPULSE UNITS, ENSURE THEY ARE OIL RESISTANT ELASTOMER RATED. INSTALLATION WITH NON-OIL RESISTANT MOUNTING HARDWARE CAN LEAD TO FAILURE AND WILL VOID THE WARRANTY!**

### MOUNTING LOCATIONS

Recommended Mechanical mounting hardware sizes are shown in Table 3-1 below. Mounting locations are shown in Fig. 3-1.

**Table 3.1** Recommended Mechanical mounting hardware sizes

HYDRAPULSE FRAME SIZE	MOUNTING HARDWARE	SAE J428 GRADE /SAE J1199 CLASS	RECOMMENDED VIBRATION MOUNT
1	5/16"-18 UNC	5 / 5.8 (Minimum)	Lord CB-2201-11 (OIL RESISTANT)
2	1/2"-13 UNC	8 / 10.9	Lord CB-2202-11 (OIL RESISTANT)
3	5/8"-11 UNC	8 / 10.9	Lord CB-2203-12 (OIL RESISTANT)

# 4. WIRING INSTALLATION

The following sections detail the electrical requirements and connections available on the Hydrapulse product line. Except where explicitly stated, all information applies to all EHPU and EHSU models.


## COMMUNICATIONS AND CONTROL WIRING

### LOW VOLTAGE CONNECTOR - DEVICE SIDE

All Hydrapulse units use an Amphenol BoardLock ATM15-08PA-BM02 8 pin connector. This connector supplies low voltage power, CAN, E-stop, and the High Voltage Interlock loop (HVIL).


### MATING LOW VOLTAGE CONNECTOR - CABLE SIDE

The cable side mating connector is an Amphenol ATM06-08SA and can be purchased separately, in a connector kit, or as a full cable assembly. See specific datasheet for details on ordering.

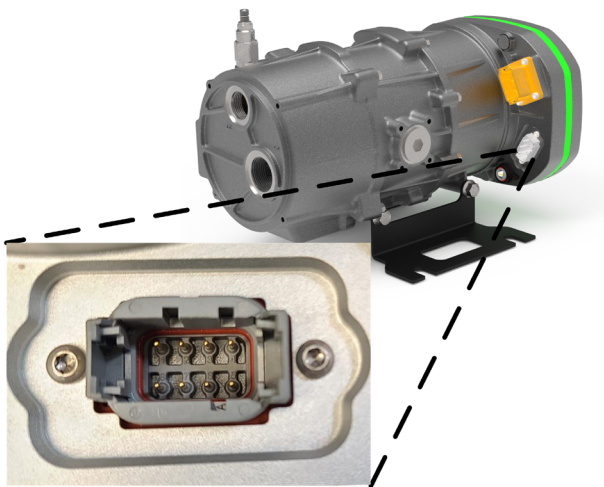


**Table 4.1**  
**Amphenol ATM Connector Pinout**  
**(All Frame Sizes)**


PIN#	NAME	DESCRIPTION
1	VCC	9-36vDC control power
2	GND	9-36vDC control ground
3	CAN-H	CAN High
4	CAN-L	CAN Low
5	STO-0 (E-STOP 0)	E-Stop 0
6	STO-1 (E-STOP 1)	E-Stop 1
7	HVIL-0	High Voltage Interlock Loop - 0
8	HVIL-1	High Voltage Interlock Loop - 1

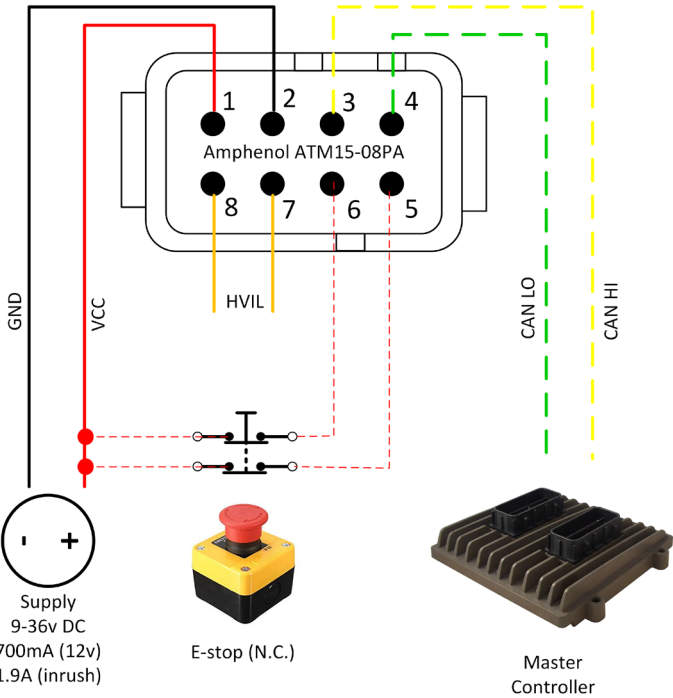

**Mating Connector**  
**(Cable Side)**

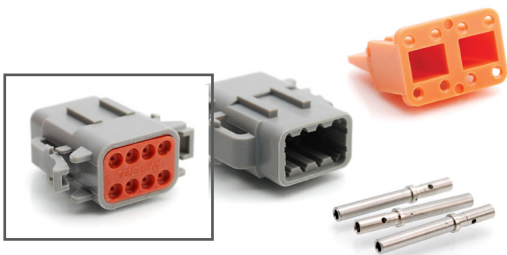

*ATM06-08SA Plug (with wedge & contacts shown)*

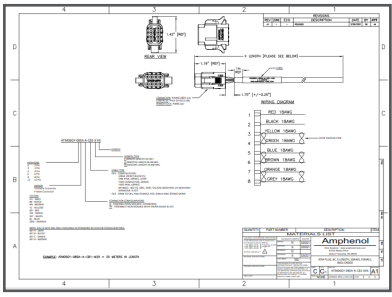

*Cable Assembly Available in custom lengths*

## SIGNAL DESCRIPTIONS

The following provide descriptions and specifications for all controls/communication signals available in the ATM15 8-pin connector.

## CONTROL POWER

Control power will supply power to the on-board controller and all sensors. Configuration and some debugging can be done with only control power applied (i.e. no high-power input). It is recommended that firmware update occurs with only control power applied.

The table below lists the specifications.

**Table 4.2**


	SPECIFICATION	NOTES
Input Voltage Range	9-36 VDC	
Typical Current Draw	~700 mA	@ 12 VDC
In-Rush Current	~1.9 A	@ 12 VDC Only on power-up
Max Cont. Pin Current	3.5 A	Applicable for all input voltage levels

## CAN COMMUNICATIONS

CAN-H and CAN-L connections follow the hardware requirements for CANbus. For network and communication specifications, refer to Section 6.

## INTERNAL TERMINATION RESISTOR

An internal 120 $\Omega$  termination resistor can be applied/not applied to the network if needed. This setting is software selectable. The figure below shows the schematic of the internal termination resistor when applied. Refer to Section 6 for software configuration of the termination resistor.

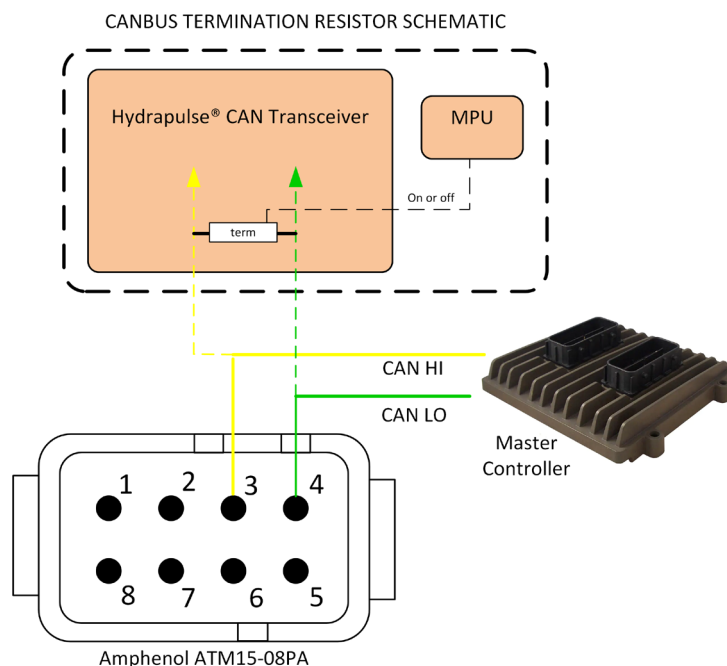

## E-STOPS (SAFE TORQUE OFF)

Hydrapulse E-Stop functionality is designed to adhere to the Safe Torque Off (STO) requirements found in many industrial machine safety protocols.

STO-0 and STO-1 each control a normally-open safety relay to shut down the motor drive circuitry from a hardware level. Both relays are connected in series to provide redundancy. Power must be supplied to both STO pins in order to operate the Hydrapulse units.



### NOTICE!

**TWO E-STOP SIGNALS ARE PROVIDED TO GIVE FLEXIBILITY FOR THE USER TO HAVE TWO SEPARATE AND INDEPENDENT E-STOP SWITCHES, BUT SHOULD THE USER WISH TO ONLY OPERATE A SINGLE E-STOP SWITCH THEN THE OTHER SIGNAL MAY BE TIED HIGH TO VCC. IT IS NOT RECOMMENDED TO BYPASS BOTH E-STOP SIGNALS IN THIS WAY.**


The input signals are referenced to GND (9-36VDC control ground). The input voltage range is 9-36VDC. A common method of connecting the STO signals is to use a dual channel, normally-closed E-Stop button shown in the figure below.

When an E-Stop is triggered, the following procedure should be done:

- Resolve the issue that led to an E-Stop
- Reset the STO-0 and STO-1 inputs
- Clear the **SAFE TORQUE OFF** fault with the **CLEAR FAULT** command. Refer to Section 6 and 7.

## GROUNDING

Correct grounding for the Hydrapulse is important for safety, proper operation of the Hydrapulse, and the operation of voltage sense systems.

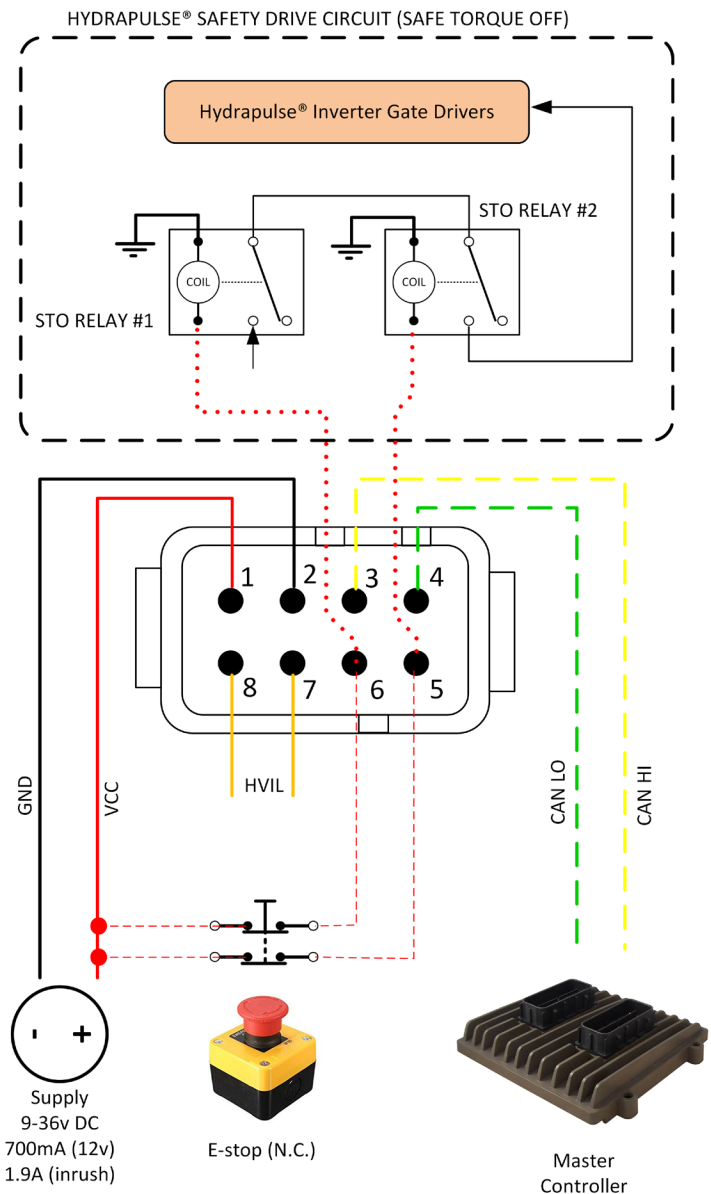

## CHASSIS REFERENCE GROUNDING (EV/HEV APPLICATIONS)

For vehicle applications, a clean bonding wire must be installed at the reference point shown below to ensure correct bonding of the Hydrapulse units to the vehicle chassis for voltage reference and safety systems.


## EARTH GROUNDING (STATIONARY APPLICATIONS)

A grounding wire must be installed to earth ground (PE) in AC industrial or stationary applications. This ground circuit is connected to the earth ground in common with the AC to DC front end.

## BUS VOLTAGE AND RATED SPEED

An important aspect regarding the physics of electric motors is the relationship between bus voltage and a motor's rated speed (i.e. flowrate). As the bus voltage decreases, the motor's rated speed also decreases. The Hydrapulse product line is designed so that the motor's rated speed is well above the maximum commanded speed, but this cannot be guaranteed in every case – especially for applications using the high voltage models at the lower end of the input range.

Refer to each model's flowrate versus voltage graphs to determine which model meets certain flow/speed requirements at specific voltages. Contact an Applications Engineer if a higher rated speed needs to be reached.

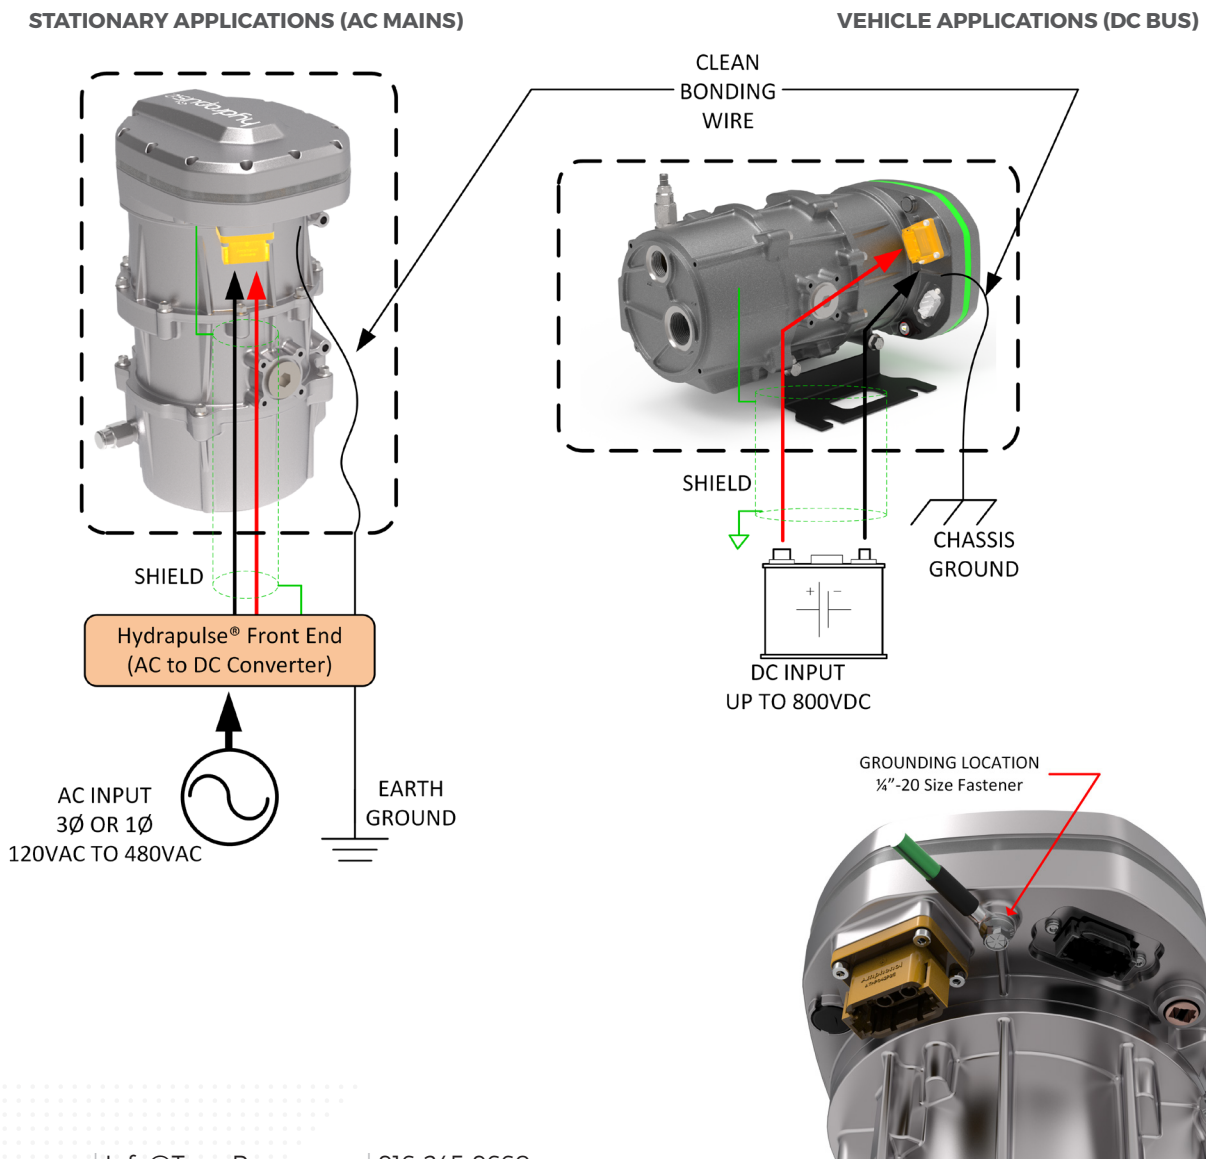

## HIGH POWER INPUT

For all Hydrapulse models, the high power input is isolated from the 9-36VDC control power input. The high power input provides power to the motor drive circuitry.

The high power inputs for Hydrapulse models fall into one of two categories: low voltage (24-48 VDC) and high voltage (200-800 VDC).

## LOW VOLTAGE MODELS (24-48VDC)

Coming Soon - check with our sales team on availability.

## HIGH VOLTAGE MODELS (200-800VDC)

This section applies to all Hydrapulse models with input voltage ratings of 200-800 VDC.

## FUSE SIZING

For high voltage models, there is no fuse internal to the device. A fuse must be added to the system. This can be done in two different ways:

1. In applications using the Hydrapulse AC to DC Front End, the protection fuse is located in the Front End unit. A separate, external fuse is not needed.
2. For all other applications, an external fuse is required. A slow-blow fuse should be sized according to the current draw based on the application's requirements. Alternatively, the following recommended fuses can be used as reference:

## PRE-CHARGE CAPACITANCE


When the Hydrapulse is the only component in the high voltage circuit, a pre-charge circuit is not required but it is recommended. The figure below shows a typical (and recommended) high-voltage, pre-charge circuit.

**Table 4.3**

Model Number	FUSE AMPERAGE	Recommended Fuse
EHxU-1-56-350		Schurter 8020.2060
EHxU-1-56-650		
EHxU-2-105-350		Littelfuse SPFJ070
EHxU-2-105-650		
EHxU-3-xxx-350		
EHxU-3-xxx-650		Littelfuse SPFJ125
HCP-1-56-350		
HCP-1-56-650		



### Typical high-voltage pre-charge circuit

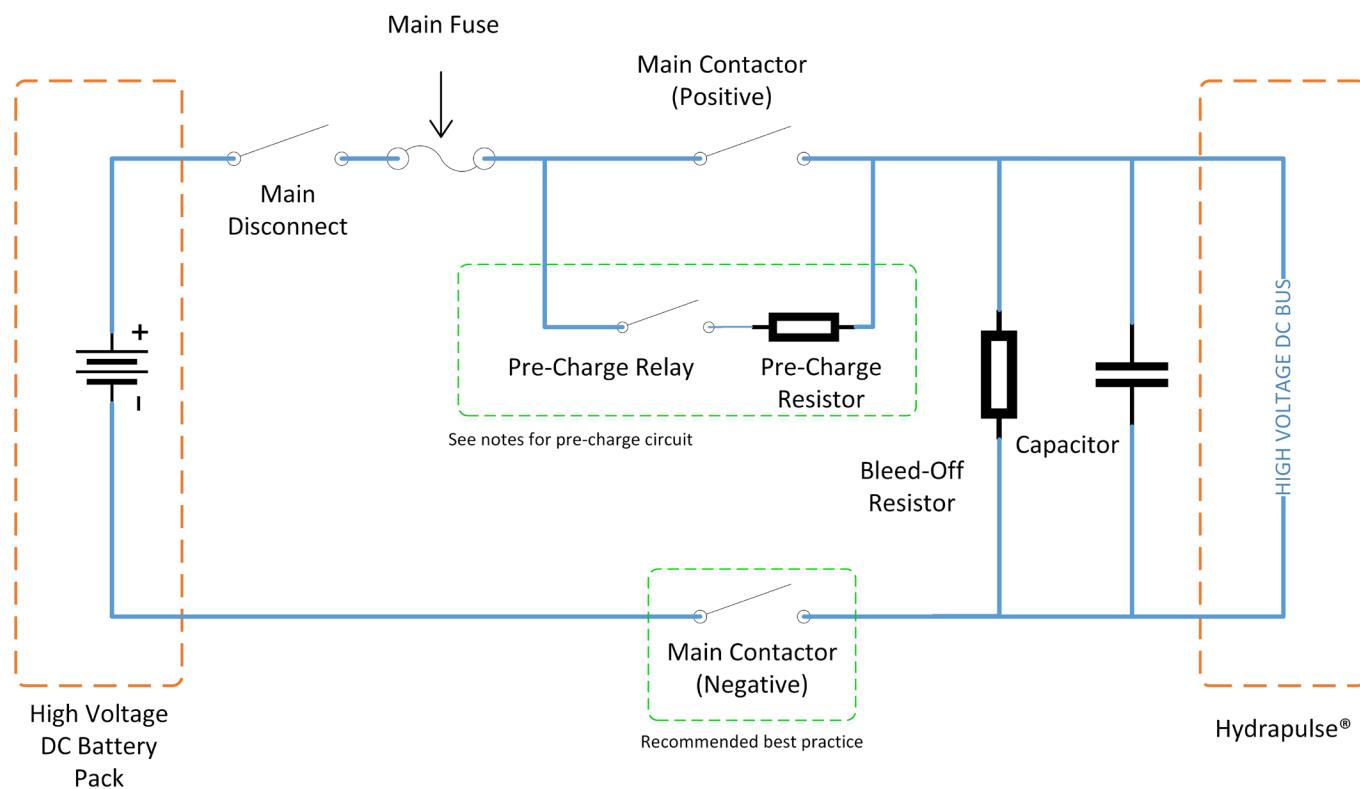

**Table 4.4** Input Bus Capacitance

Model Number	Capacitance (uF)
EHxU-1	20
EHxU-2	20
EHxU-3	20
HCP-1	20

## 5. CONTROLS

### FIRMWARE UPDATES

Current and archived firmware files can be found online on our resource center page <https://TerzoPower.com/resource-center/firmware/>

#### Firmware Update Over USB

It may be necessary in certain applications and situations to update the factory firmware of a Hydrapulse. If your model has a mini USB access port, you can update the firmware via a USB stick. You will need a mini USB to USB cable to perform this function.

1. Load the desired .tza firmware file to the root directory of the flash drive.
2. With device powered down, install the flash drive to the USB port on the device.
3. Power up device and wait for the confirmation LED pattern:

Flashing Blue	-	USB Detected
Fast Flashing Blue	-	Loading Firmware
White	-	Firmware Update Complete

**Note:** Do not rename the .tza file when loading onto the flash drive. Ensure that the file is in the root of the drive and that no other .tza files are also present. If firmware is corrupted during the firmware update process (e.g. power loss during update), reload the firmware using the same procedure. LED behavior may not work if firmware is corrupted.

If LED behavior is not operating, it is recommended to power on the device with the flash drive installed and wait for 30 seconds before powering off. Then remove the flash drive and boot the device normally.

USB Firmware update video can be found online at our resource center at the following URL: <https://TerzoPower.com/resource-center/firmware-usb-update>




#### Firmware Update Over CAN

Coming soon. Please contact us for more information.

### DEVICE STATES

The figure below shows the different states of the Hydrapulse.

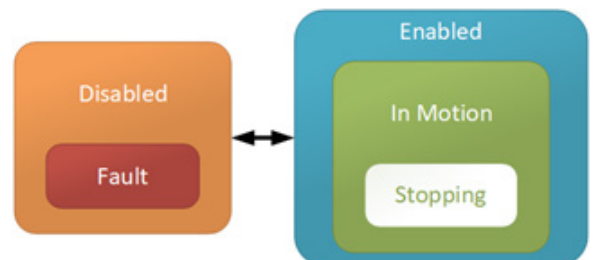

The Hydrapulse powers up in the Disabled state and all configuration must be done in this state. To operate the device it must be moved to the Enabled state. In the Enabled state, only Operational Control Parameters from Table 5.2 are valid. Table 5.1 below lists the device states and summarizes the transitions between the states.

**Note:** Disabled and Enabled states refer to the motor drive controller. Enabled means that motor position is regulated (even if no motion is commanded). There may or may not be holding torque applied when stopped, depending on the inputs to the system. In many cases, Disabled is the preferred state when no motion is required, especially if energy conservation is valued.

**Table 5.1** Hydrapulse State Descriptions

STATE	STATE TRANSITIONS	FEEDBACK	VALID COMMUNICATIONS	NOTES
DISABLED	to/from <i>Enabled</i> by setting <b>DEVICE ENABLE</b>	<b>ENABLE STATE</b>	All communication valid	
FAULT	To <i>DISABLED</i> by resolving fault from <i>ENABLED</i> when fault is detected	<b>ANY FAULT</b>	All communication valid	Must resolve fault before moving device to <i>Enabled</i> state. See faults section.
ENABLED	to/from <i>DISABLED</i> by setting <b>DEVICE ENABLE</b>	<b>ENABLE STATE</b>	Only Operational Control Commands	
IN MOTION	to <i>STOPPING</i> by setting <b>START/STOP</b> to stop from <i>ENABLED</i> by setting <b>START/STOP</b> to start and setting a non-zero <b>COMMAND SETPOINT</b>	<b>IN MOTION</b>	Only Operational Control Commands	
STOPPING	to <i>ENABLED</i> by waiting for device to stop from <i>IN MOTION</i> by setting <b>START/STOP</b> to stop	<b>STOPPING</b>	Only Operational Control Commands	

## CONTROL PARAMETERS

Operational Control Parameters allow the device to transition between states and control the output of the Hydrapulse when in operation. All Operational Control Parameters are listed below. Refer to Section 6 for J1939 details.

**Table 5.2** Operational Control Parameters

PARAMETER	TYPE	NOTES
<b>DEVICE ENABLE</b>	Boolean	Disables / Enables device
<b>START/STOP</b>	Boolean	Commands motion / stops motion
<b>COMMAND SETPOINT</b>	Signed Value	Updates output reference. Either flowrate or pressure base on <b>PUMP MODE</b>

## MODES OF OPERATION - CONSTANT FLOW MODE

When **PUMP MODE** is configured for constant flow, the **COMMAND SETPOINT** parameter sets the speed of the motor and therefore the *flowrate* of the Hydrapulse. The flowrate (speed) will continuously adjust to maintain the flowrate setpoint.

### Acceleration & Deceleration Slew Rates

The Configuration Parameters, **ACCELERATION** and **DECELERATION** will set the slew rate for the commanded flowrate (speed) of the motor. They apply every time the **COMMAND SETPOINT** is updated.

### Pressure Limiting

The motor will adjust the output to maintain flow (speed), unless the pressure reading reaches the **MAX PRESSURE** setpoint. In this case, the motor will scale back its output to maintain that pressure so as not to exceed the setting.

The **PRESSURE/FLOW LIMITING** warning indicates if the device is pressure limited (i.e., has reached the max pressure setpoint).

## MODES OF OPERATION - CONSTANT PRESSURE MODE

When **PUMP MODE** is configured for constant pressure, the **COMMAND SETPOINT** parameter sets the target pressure of the Hydrapulse. The output of the pump will continuously adjust to maintain the pressure setpoint.

### Flow Limiting

The motor will adjust the output to maintain pressure, unless the speed reading reaches the **MAX SPEED** setpoint. In this case, the motor will scale back its output to maintain that speed so as not to exceed the setting.

## PROCESS DATA (FEEDBACK TO USER VIA BROADCAST MESSAGES)

All device states, operational settings, and measured values are fed back to the user as Process Data. **CAN SCHEDULING** configures if Process Data is broadcasted automatically and the frequency at which it is broadcasted at. The Table below lists all data that is fed back to the user. Refer to the Section 6 for specific data format and J1939 PGN information.

**Table 5.3** Process Data List and Description

NAME	TYPE	DESCRIPTION	NOTES
Device Operational State			
<b>ENABLE STATE</b>	Boolean	Device disabled/enabled	
<b>IN MOTION</b>	Boolean	Device in motion/stopped	
<b>STOPPING</b>	Boolean	Device decelerating/not decelerating	
Operational Settings			
<b>PUMP MODE</b>	Boolean	Constant Flow/Constant Pressure	Reads configuration set by user
<b>COMMAND SETPOINT</b>	Signed Value	Target setpoint in flowrate or pressure	Reads operational parameter set by user
Measured Value			
<b>FLOWRATE</b>	Signed Value	Measured flowrate (speed) of device motor	
<b>PRESSURE A</b>	Unsigned Value	Measured pressure of pressure port A	
<b>PRESSURE B</b>	Unsigned Value	Measured pressure of pressure port B	
<b>DC BUS VOLTAGE</b>	Unsigned Value	Measured Bus voltage	
<b>DEVICE TEMPERATURE</b>	Unsigned Value	Measured internal temperature of device hardware	
<b>FLUID TEMPERATURE</b>	Unsigned Value	Measured temperature of hydraulic fluid	

## CONFIGURATION PARAMETERS

Table 5.4 lists all configuration parameters available to the user. Configuration is valid only while the device is disabled.

## READ DEVICE CONFIGURATION

The current device configuration can be read by requesting particular J1939 PGNs. The specific PGNs are listed in Section 6 J1939 Communications.

Additionally, the device ID can be read to indicate product type, firmware version, and serial number of the drive side. Refer to Section 6 J1939 Communications.

**Table 5.4 Configuration Parameters**

NAME	TYPE	DESCRIPTION	NOTES
PUMP MODE	2 bit	Selects constant pressure or constant flow	Refer to Pump mode section
INVERT DIRECTION	Boolean	Sets direction of rotation for motor. Reference is looking down on pump side	
INVERT PRESSURE SENSE	Boolean	Sets the high pressure port	
UNIDIRECTIONAL MODE	Boolean	Disables/enables bi-directionality	
HEARTBEAT DISABLE	Boolean	Disables/enables heartbeat functionality	Refer to Heartbeat section
CAN SCHEDULING	Lookup table	Sets frequency of Process Data messages	Refer to CAN section
TUNING PARAMETERS	Lookup table	Selects the tuning for constant flow and constant pressure response	Select appropriate output response.
MAX SPEED	Unsigned Value	Sets the maximum output speed of the motor	Two parameters are available for both directions
ACCELERATION	Unsigned Value	Sets the acceleration slew rate for constant flow	Two parameters are available for both directions
DECELERATION	Unsigned Value	Sets the deceleration slew rate for constant flow	Two parameters are available for both directions
MAX PRESSURE	Unsigned Value	Sets the maximum pressure output for constant flow mode	Two parameters are available for both directions
MAX FAULT PRESSURE	Unsigned Value	Sets the pressure threshold where the device would fault	Expressed as a percentage above MAX PRESSURE

## BURN TO EEPROM AND FACTORY RESET

To save the current device configuration on power cycle, the configuration parameters can be burned into EEPROM. This action burns all parameter settings into EEPROM. Additionally, all parameters can be reset to factory default settings. This also performs a burn function which will overwrite any previously burned settings. Refer to Section 6 for specifics.

## FAULTS AND WARNINGS OVERVIEW

The Hydrapulse uses a multitude of sensors to monitor the operation and environment of the device. To ensure safe operation, there are multiple faults and warnings that can occur. A fault will disable the device, while a warning will continue operation with reduced power output or performance. The following describe the different faults and warnings that can occur.

**Table 5.5 Fault List with Description**

FAULT	DESCRIPTION	CLEAR FAULT
OVER CURRENT FAULT	Main DC Bus fuse blown	Consult factory
OVER VOLTAGE FAULT	DC Bus voltage exceeds 900V	CLEAR FAULT command
UNDER VOLTAGE FAULT	DC Bus voltage under 150V	Clears when Bus voltage reaches 150V
OVER TEMPERATURE FAULT	Device temperature exceeds 125°C	CLEAR FAULT command
FLUID OVER TEMP FAULT	Fluid temperature exceeds 80°C	CLEAR FAULT command
SAFE TORQUE OFF	E-Stop open	CLEAR FAULT command
HEARTBEAT IN NOT DETECTED	No communication from host controller within 1 second (when heartbeat is enabled)	CLEAR FAULT command
OVER PRESSURE FAULT	Pressure exceeds 4000 PSI or pressure set with MAX PRESSURE and MAX FAULT PRESSURE (whichever is lower)	CLEAR FAULT Command
INVERTER FAULT	Motor drive hardware failure	Consult factory
DEVICE HARDWARE FAULT	Internal hardware failure	Consult factory
ANY FAULT	Any of the above faults has occurred	

## LIST OF FAULTS

Clear Fault Command - Many faults require the host controller to issue the **CLEAR FAULT** command. Refer to Table 6.8 - Auxillary Command PGNs.



### NOTICE!

**IT IS THE RESPONSIBILITY OF THE USER TO ENSURE THE CAUSE OF THE FAULT IS RESOLVED BEFORE CLEARING. FAILURE TO DO SO MAY LEAD TO DEVICE OR SYSTEM FAILURES.**

## LIST OF WARNINGS

The table below describes the warnings and associated behavior on the device.

**Table 5.6** Warning List with Description

WARNING	DESCRIPTION	NOTES
<b>PRESSURE / FLOW LIMITING</b>	Constant Pressure: maximum speed is reached Constant Flow: maximum pressure is reached	<b>MAX SPEED</b> and <b>MAX PRESSURE</b> set the output thresholds. Refer to “Pressure Limiting” and “Flow Limiting” in Section 5
<b>TORQUE OUTPUT LIMITING</b>	Device maximum output is reached	Refer to below “Torque Output Limiting” below

## TORQUE OUTPUT LIMITING

The maximum output of the motor is internally fixed based on the cooling requirement of the device. If the pump side is loaded such that the maximum output is reached, the device will remain operating at this max output. The **TORQUE OUTPUT LIMITING** warning indicates if the device maximum output is reached.

## HEARTBEAT MODE

When heartbeat is enabled (default), an Operational Control PGN must be sent at a frequency of 1 Hz (once per second) or greater when the device is enabled. If an Operational Control PGN is not received within 1 second, the device will stop motion and enter an error state.

Heartbeat can be disabled through the **HEARTBEAT DISABLE** parameter.

## L.E.D. STATUS INDICATION

The Hydrapulse Smart Pump has an LED light ring status indicator visible during operation. This is used to visually indicate status of the Hydrapulse. For further status details such as fault codes, the user interface can give all information needed for troubleshooting and correcting issues. The table below lists the LED pattern and description.

L.E.D. COLOR & PATTERN	DESCRIPTION
Flash Orange	Device is booting up
Orange	Device is in disabled state
Blue	Device is in enabled state and stopped
Green	Device is in enabled state and running
Flash Red	Fault has occurred
<i>EEPROM</i>	
White	EEPROM burn complete
<i>Firmware Update</i>	
Flash Blue	USB detected
Fast Flash Blue	Firmware update in progress
White	Firmware update complete
Fast Flash Red/Orange	Corrupt firmware



## 6. J1939 COMMUNICATIONS

The Hydrapulse device follows the J1939 communication standard. Reference SAE J1939 documents for more details regarding the communication standard.

### NETWORK CONFIGURATION

#### Network Requirements

**Baud Rate:** 250 kb/s (125 kb/s, 500 kb/s, 1000 kb/s contact Hydrapulse if required)

**Termination Resistor:** Yes (contact Hydrapulse if no resistor required)

Termination resistor is software selectable and enabled by default. Contact us to discuss.

#### Device Address

Upon device start-up, each device will perform an auto-assign routine to claim an available address. The device will attempt to claim address 100 (0x64). If already taken, the device will increment the address by 1 and reattempt.

### ADDRESS PGNS

There is one receive (RX) and one transmit (TX) Address PGN associated with the device. The first byte of the RX PGN is used to set a custom CAN address. When this PGN is received with an address in the acceptable range, the device will claim the new address if no conflicts exist. Once claimed, the new address is burned to EEPROM.

**Table 6.1 Address in Command**

PGN 0x00FF01 (RX)			
Description	Length	Bit Offset	Notes
Address	8	0	Hydrapulse responds to following decimal values: 1 : Reset to default address 100, claim it and burn to EEPROM 128 – 247 : Claim new address and burn to EEPROM Other values: Ignore and keep the current address.
Reserved	56	8	N/A

When a set address PGN is received on the RX PGN, the TX PGN is sent to confirm the newly set address if the command was successful. Address out PGN is also available by request using PGN EA00.

**Table 6.2 Address out Command**

PGN 0x00F6E8 (TX)			
Description	Length	Bit Offset	Notes
Address	8	0	Unsigned integer. Displays the current address.
Reserved	56	8	N/A

## PGN MAPPING

The following sections detail the specific PGNs and their data fields transmitted and received by the Hydrapulse device.

### CONFIGURATION COMMAND PGNS

There are eight configuration PGNs associated with the device: four transmit (TX) and four receive (RX). The data fields in the four transmit PGNs match those in the receive PGNs. The receive PGNs are used to configure the device while the transmit PGNs are used to report back current device configuration.

Each time the device receives a configuration PGN it will respond with the associated transmitted configuration PGN. This allows the user to confirm whether configuration was successful. The device may not accept or may modify received configuration parameters if they are invalid or out of range. For example, if a **MAX SPEED+** parameter is greater than 4,000 RPM, the device will cap it at 4,000 (or the maximum speed of your model). The transmit configuration PGNs can additionally be requested at any time following the J1939 protocol. Refer to the "Request Specific PGNs" at the end of this section for more information.

Table below summarizes the configuration PGNs available on the device.

**Table 6.3**

	RX PGN	TX PGN	DATA
Configuration #1	0x006600	0x00F2C0	Table 6.4
Configuration #2	0x006700	0x00F2D0	Table 6.5
Configuration #3	0x006800	0x00F2E0	Table 6.6
Configuration #4	0x006900	0x00F2F0	Reserved for Future Use

**Table 6.4 Configuration Commands #1**

PGN 0x006600 (RX) / 0x00F2C0 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
PUMP MODE	2	0	00: Constant Flow (default) 01: Constant Pressure 10 & 11: Reserved			
INVERT DIRECTION	1	2	0: CCW is positive direction (default) 1: CW is positive direction			Rotation when looking down at pump
INVERT PRESSURE SENSE	1	3	0: Port A is <b>HIGH-SIDE PRESSURE</b> (default) 1: Port B is <b>HIGH-SIDE PRESSURE</b>			
UNIDIRECTIONAL MODE	1	4	0: Bidirectional mode (default) 1: Unidirectional mode			When set, unidirectional mode only allows motion in the + direction
RESERVED	2	5	N/A			
HEARTBEAT DISABLE	1	7	0: Heartbeat mode is enabled (default) 1: Heartbeat mode is disabled			Refer to "Heartbeat Mode" in Section 5
RESERVED	16	8	N/A			
CAN SCHEDULING	4	24	Refer to Table 6.3 Below			All Process Data PGNs and <i>Fault/Warning</i> PGN are sent at this frequency
RESERVED	4	28	N/A			
TUNING PARAMETERS	4	32	Refer to Table 6.5 Below			
RESERVED	28	36	N/A			

**Table 6.5 Configuration Commands #2**

PGN 0x006700 (RX) / 0x00F2D0 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
ACCELERATION+	8	0	RPM/msec	1 RPM-msec/bit	0	Acceleration slew rate for + speeds. Refer to Table 6.9 below
ACCELERATION-	8	8	RPM/msec	1 RPM-msec/bit	0	Acceleration slew rate for – speeds. Refer to Table 6.9 below
DECELERATION+	8	16	RPM/msec	1 RPM-msec/bit	0	Deceleration slew rate for + speeds. Refer to Table 6.9
DECELERATION-	8	24	RPM/msec	1 RPM-msec/bit	0	Deceleration slew rate for – speeds. Refer to Table 6.9 below
MAX FAULT PRESSURE	8	32	%	1 %/bit	100%	Sets pressure fault point. Based on <b>MAX PRESSURE+</b> and <b>MAX PRESSURE-</b> Refer to Refer to Table 6.9 below
RESERVED	24	40	N/A			

**Table 6.6 Configuration Commands #3**

PGN 0x006800 (RX) / 0x00F2E0 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
MAX SPEED+	16	0	RPM	1 RPM/BIT	0	AMax speed in + direction. Unsigned 16 bit, little endian Example: 0x07D0 sets max speed of 2000 RPM. Refer to Table 6.9
MAX SPEED-	16	16	RPM	1 RPM/BIT	0	Max speed in - direction. Unsigned 16 bit, little endian. Refer to Table 6.9
MAX PRESSURE+	16	32	RPM	1 PSI/BIT	0	Max pressure in + direction. Unsigned 16 bit, little endian Example: 0x03E8 sets max pressure of 1000 PSI. Refer to Table 6.9
MAX PRESSURE-	16	48	RPM	1 PSI/BIT	0	Max pressure in - direction. Unsigned 16 bit, little endian. Refer to Table 6.9

**Table 6.7 CAN Scheduling Options**

DATA BITS (HEX)	DESCRIPTION
0x0, 0xF	N/A Setting. No function when part of RX PGN
0x1	All scheduled PGNs transmitted at 100 msec intervals
0x2	Transmitted at 200 msec intervals
0x3	Transmitted at 300 msec intervals
0x4	Transmitted at 400 msec intervals
0x5	Transmitted at 500 msec intervals (default)
0x6	Transmitted at 600 msec intervals
0x7	Transmitted at 700 msec intervals
0x8	Transmitted at 800 msec intervals
0x9	Transmitted at 900 msec intervals
0xA	Transmitted at 1 sec intervals
0xB	Transmitted at 1100 msec intervals
0xC	Transmitted at 1200 msec intervals
0xD	Transmitted at 1300msec intervals
0xE	PGNs only available on request

**Table 6.8 Tuning Parameter Options**

DATA BITS (HEX)	DESCRIPTION
0x0, 0xF	N/A Setting. No function when part of RX PGN
0x1	Default Tuning (default)
0x2 – 0xE	Reserved

**Table 6.9 Valid Range and Default Values for Parameters**

PARAMETER	MIN	MAX	DEFAULT	EXAMPLE
ACCELERATION+	1	50	20	
ACCELERATION-	1	50	20	
DECELERATION+	1	50	20	
DECELERATION-	1	50	20	
MAX FAULT PRESSURE	20	100	50	
MAX SPEED+	500	4000/3500* /3000**	4000/3500* /3000**	
MAX SPEED-	500	4000/3500*/3000**	4000/3500*/3000**	
MAX PRESSURE+	200	4000	3000	
MAX PRESSURE-	200	4000	3000	

**NOTES**

\* Models with Frame Size 2 have max speed of 3500 RPM

\*\* Models with Frame Size 3 have max speed of 3000 RPM

## OPERATIONAL CONTROL PGNS

There are two receive (RX) Operational Control PGNs associated with the device. The table below summarizes the Operational Control PGNs available on the device.

	RX PGN	DATA
Operational Control #1	0x006400	Table 6.10 Below
Operational Control #2	0x006500	Reserved for Future Use

**Table 6.10** Operational Control Commands

PGN 0x006400 (RX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
DEVICE ENABLE	1	0	0: Disable Device 1: Enable Device			
START/STOP	1	1	0: Command Stop 1: Command Motion			
RESERVED	6	2	N/A			
COMMAND SETPOINT	16	8	RPM or PSI	1 RPM/bit or 1 PSI/bit	0	Signed 16 bit, little endian Pump Mode determines units. Constant Flow sets RPM/Constant Pressure sets PSI
RESERVED	40	24	N/A			

## AUXILIARY COMMAND PGNS

There is one receive (RX) Auxiliary Command PGN associated with the device. The data field is broken into Groups, where a particular group value will perform a specific operation, such as Clear Faults.

**Table 6.11** Auxiliary Commands

PGN 0x006A00			
DESCRIPTION	LENGTH	BIT OFFSET	NOTES
RESERVED	56	0	N/A
GROUP 1	4	56	0000: No Function 0001: Clear Faults
GROUP 2	4	60	0000: No Function 0001: Burn to EEPROM 0010: Reset Factory Default Parameters

## PROCESS DATA PGNS

There are five transmit (TX) Process Data PGNs associated with the device. The Process Data is used to give live feedback regarding the state of operation and sensor values. They are automatically transmitted at the frequency set by the **CAN SCHEDULING** parameter in Table 6.7, or can be transmitted by request by the host controller. The table below summarizes the Process Data PGNs available on the device.

	TX PGN	DATA
Process Data #1	0x00F250	Table 6.12 Below
Process Data #2	0x00F260	Table 6.13 Below
Process Data #3	0x00F270	Table 6.14 Below
Process Data #4	0x00F280	Table 6.15 Below
Process Data #5	0x00F290	Reserved for Future Use

**Table 6.12 Process Data #1**

PGN 0x00F250 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
TIME	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
PUMP MODE	2	8	00: Constant Flow 01: Constant Pressure 10 & 11: Reserved			
ENABLE STATE	1	10	0: Device Disabled 1: Device Enabled			
IN MOTION	1	11	0: Device not in motion 1: Device in motion			
STOPPING	1	12	0: Device not decelerating 1: Device decelerating			
RESERVED	18	13	N/A			
COMMAND SETPOINT	16	32	RPM or PSI	1 RPM/bit or 1 PSI/bit	0	Signed 16 bit, little endian
RESERVED	16	48	N/A			

**Table 6.13 Process Data #2**

PGN 0x00F260 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
TIME	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
RESERVED	8	8	N/A			
FLOWRATE	16	16	RPM	1 RPM/bit	0	Signed 16 bit, little endian
HIGH-SIDE PRESSURE	16	32	PSI	1 PSI/bit	0	Unsigned 16 bit, little endian
LOW-SIDE PRESSURE	16	48	PSI	1 PSI/bit	0	Unsigned 16 bit, little endian

**Table 6.14 Process Data #3**

PGN 0x00F270 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
TIME	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
RESERVED	8	8	N/A			
POSITION	16	16	revolutions	4 revs/bit	0	Signed 16 bit, little endian
RESERVED	32	32	N/A			

**Table 6.15 Process Data #4**

PGN 0x00F280 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
TIME	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
DEVICE TEMPERATURE	8	8	°C	1 °C/bit	0	
FLUID TEMPERATURE	8	16	°C	1 °C/bit	0	
RESERVED	24	24	N/A			
DC BUS VOLTAGE	16	48	Volts	1 V/bit	0	



## SYSTEM DATA PGN

There is one transmit (TX) System Data PGN. It is transmitted upon request from the host controller.

**Table 6.16** System Data

PGN 0x00F2B0 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
TIME SINCE LAST BURN	16	0	msec	100 msec/bit	0	Time at which last 'Burn to EEPROM' command was completed. Refer to Table 6.11.
RESERVED	48	16	N/A			

## FAULTS AND WARNINGS PGN

There is one transmit (TX) Faults and Warnings PGN associated with the device. It is automatically transmitted at the frequency set by the **CAN SCHEDULING** parameter in Table 6.7, or can be transmitted by request by the host controller

**Table 6.17** Device Faults and Warnings

PGN 0x00F240 (TX)						
DESCRIPTION	LENGTH	BIT OFFSET	UNITS	SCALE	OFFSET	NOTES
TIME	8	0	msec	100 msec/bit	0	Time at which data was sampled. Allows proper syncing of all transmitted data.
OVER VOLTAGE FAULT	1	8	0: No Fault 1: Fault occurred			Clear error with 'Clear Error' command.
UNDER VOLTAGE FAULT	1	9	0: No Fault 1: Fault occurred			Automatically clears when bus voltage returns to proper range.
OVER TEMPERATURE FAULT	1	10	0: No Fault 1: Fault occurred			Clear error with "Clear Error" command.
FLUID OVER TEMP FAULT	1	11	0: No Fault 1: Fault occurred			Clear error with "Clear Error" command.
OVER PRESSURE FAULT	1	12	0: No Fault 1: Fault occurred			Clear error with "Clear Error" command.
RESERVED	3	13	N/A			
SAFE TORQUE OFF	1	16	0: No Fault 1: Fault occurred			Clear error with "Clear Error" command.
HEARTBEAT IN NOT DETECTED	1	17	0: No Fault 1: Fault occurred			Clear error with "Clear Error" command.
RESERVED	6	18	N/A			
INVERTER FAULT	1	24	0: No Fault 1: Fault occurred			Consult Factory.
DEVICE HARDWARE FAULT	1	25	0: No Fault 1: Fault occurred			Consult Factory.
OVER CURRENT FAULT	1	26	0: No Fault 1: Fault occurred			Consult Factory.
RESERVED	13	27	N/A			
PRESSURE / FLOW LIMITING	1	40				Continued operation with reduced output.
TORQUE OUTPUT LIMITING	1	41				Continued operation with reduced output.
RESERVED	21	42	N/A			
ANY FAULT	1	63	0: No Fault 1: Fault occurred			Refer to above fault flags for specific fault.

## DEVICE ID PGN

There is one transmit (TX) Device ID PGN. It is transmitted upon request from the host controller.

**Table 6.18** Device ID

PGN 0x00F2A0 (TX)			
DESCRIPTION	LENGTH	BIT OFFSET	NOTES
Device ID	8	0	0x00: HP-015-001
Firmware Version	24	8	Divided into 3 byte unsigned values. Example: 0x010001 is Version 1.0.1
Device Serial Number	16	32	Unsigned integer. Only represents last 4 digits of device serial number. Example: 0x01D8 is serial number 472
RESERVED	16	48	N/A

## J1939 QUICK REFERENCE

The following sections are specific J1939 topics and specifications that are used by the Hydrapulse device. They are meant to be used as a quick reference. For a thorough treatment, refer to SAE J1939 documentation.

## REQUEST SPECIFIC PGNS

Some transmit (TX) PGNs on the Hydrapulse are available by request. This request is received through a reserved PGN. PGN 0x00EA00 is the request message PGN with 3 bytes of data, corresponding to the transmit PGN (TX) the host controller wishes to receive from the Hydrapulse.

PGN 0x00EA00 should be sent by the host controller with priority 6 and the three data bytes should be the requested PGN in little-endian.

7. FAQ'S

WHAT ARE THE FILTRATION REQUIREMENTS / RECOMMENDED FLUID CLEANLINESS LEVELS?

Fluid filtration is always recommended to increase service life of system components and reduce particle contamination. Recommended Minimum Cleanliness Level per table below:


Table 7.1

Minimum Recommended Cleanliness Level			Minimum Recommended Filtration Level in Microns ( $\beta_{x \geq 100}$ )
ISO 4406	NAS 1638	SAE 749D	
16/13	7	4	10 to 12

DOES THE ORIENTATION WE MOUNT THE HYDRAPULSE IN MATTER?

The Hydrapulse units can typically be mounted in any orientation but we recommend the preferred configurations shown below. Reservoir (suction) location, vibration environment, hose sizing, and other factors may need to be considered when mounting in unique configurations. For analysis of your mounting requirements, please contact us. Custom mounting solutions or further analysis might be required.


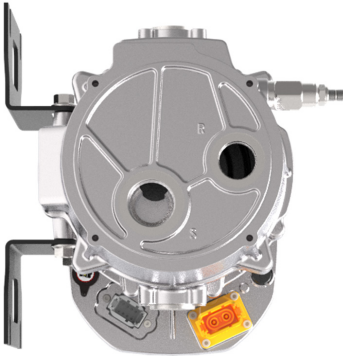


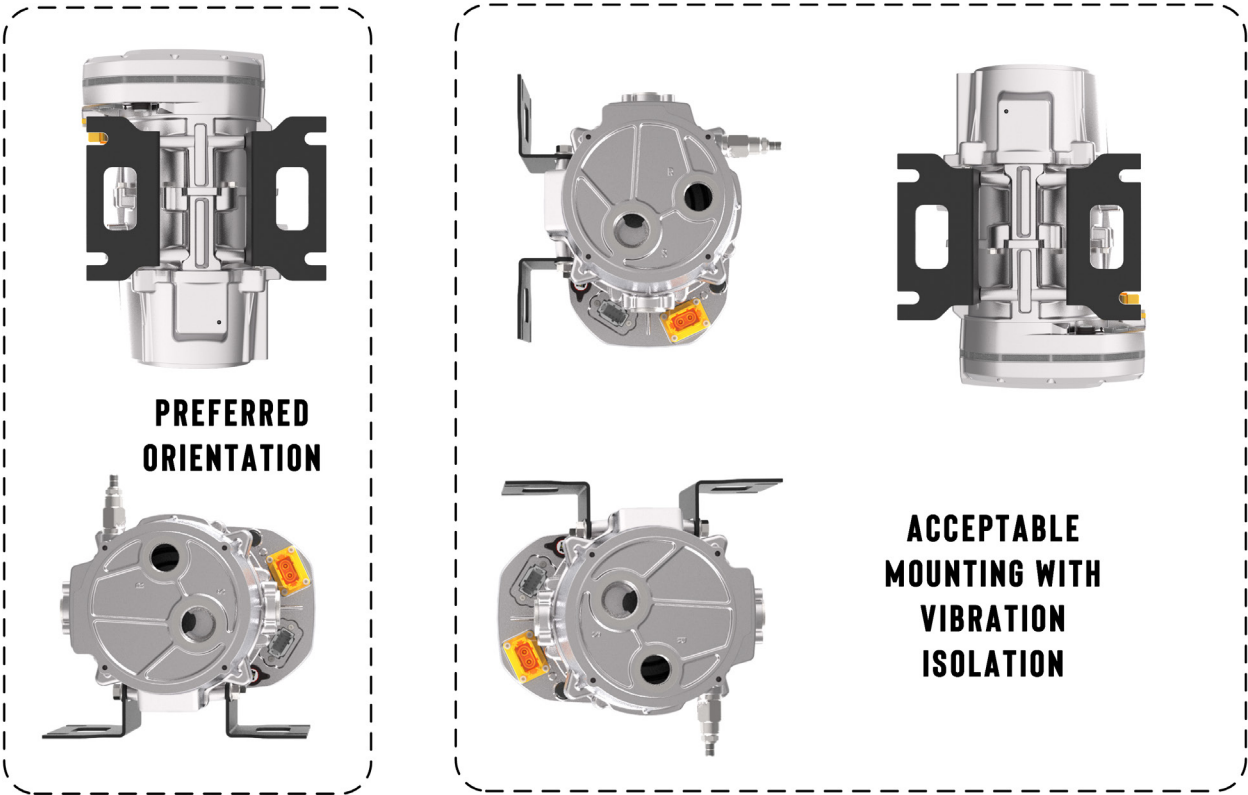Figure 7.1



SHOULD THE UNIT BE MOUNTED ON VIBRATION ISOLATORS?

When mounting the Hydrapulse in the preferred orientation, vibration isolators are recommended but not required. When mounting in other orientations, vibration isolators are required. Failure to follow recommend vibration isolation can void warranty. Refer to the table below for isolation requirements.

Table 7.2

Isolation recommended but not required. (Preferred Mounting)	Isolation Required
	
	

FLUID COMPATIBILITY?


All Hydrapulse units are compatible with most commercially available hydraulic fluids, steering fluids, and transmission fluids. When implementing any system with low viscosity or water-based fluids, consult factory prior to ordering or operating any Hydrapulse unit.

ACTIVE OR PASSIVE DISCHARGE? PASSIVE DISCHARGE TIME?

Passive discharge time is typically 60 seconds (from 650v to below 40v).

## DO WE NEED TO USE THE STO PINS?

Both Safe-Torque-Off (E-stop) pins MUST be pulled high to a 9-36v dc power source in order for the Hydrapulse to operate. This is typically taken from the same power supply that powers the low voltage side of the Hydrapulse.

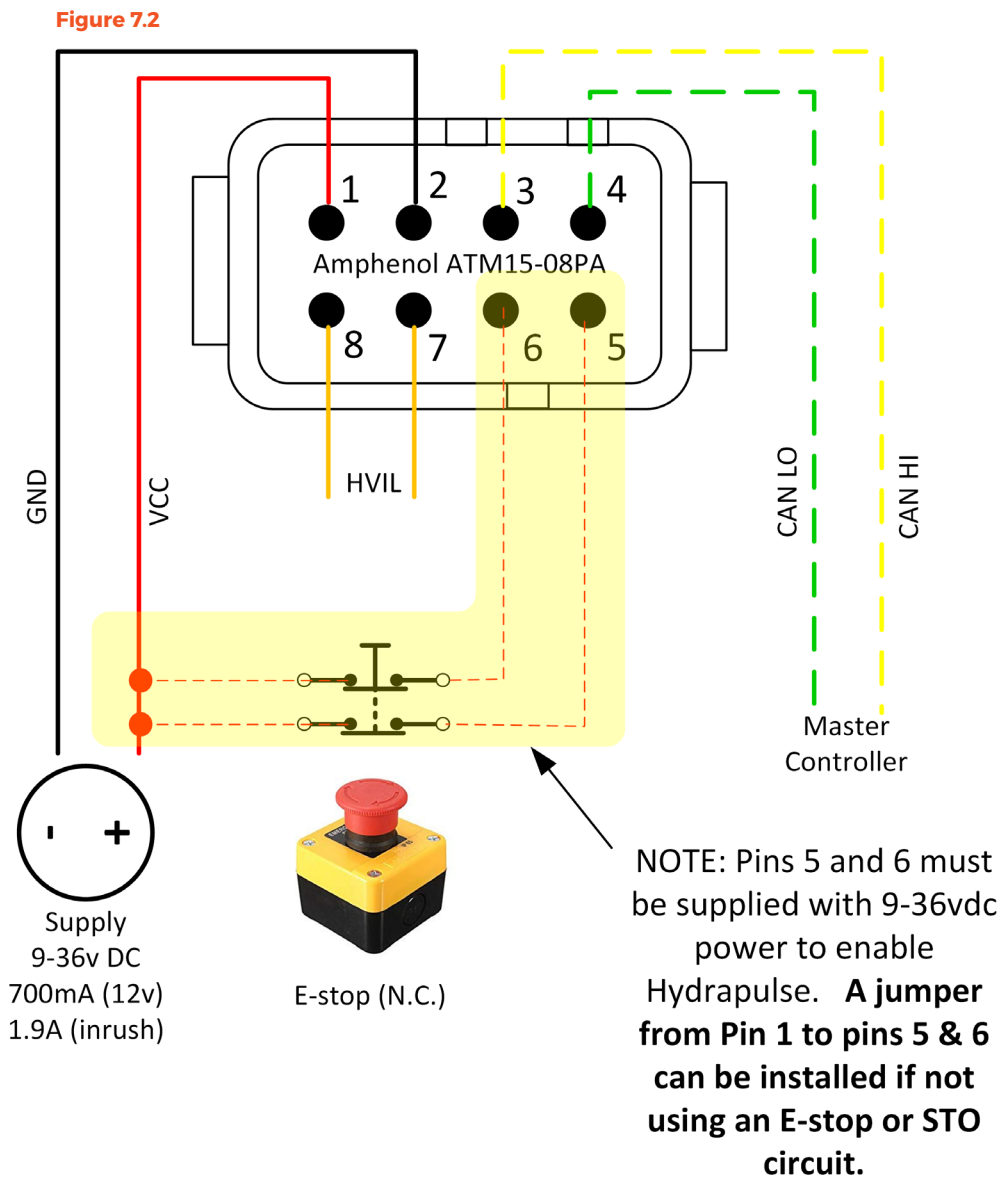

## WHAT IS THE PRE-CHARGE RESISTOR SIZE?

The pre-charge resistor should be sized to limit the inrush current to a maximum of 1 amp.

## CAN WE CHANGE THE CAN BAUD RATE?

The baud rate is selectable when ordering the Hydrapulse units. Yes, however, baud rate may be changed with a firmware update. Please contact our team for further information.

### **IS THERE A WAY TO REMOVE THE TERMINATING RESISTOR?**

Every Hydrapulse unit has an internal, software selectable CAN terminating resistor that can be selected either through the order code (a "-T" code ships with terminating resistor enabled) or through a CAN message. Refer to the operations manual for details on the Termination resistor.

### **WHAT IS THE MAXIMUM INPUT VOLTAGE?**

Typically, the maximum voltage that the Hydrapulse unit can see is 800V for the high voltage models. Intermittent voltage spikes are allowable up to 950v.

### **CAN WE USE OUR EXISTING COOLING CIRCUIT INSTEAD OF THE RETURN HYDRAULIC OIL?**

Yes, most units (with the exception of our bi-directional models) can utilize a separate cooling system instead of the hydraulic oil from the low pressure return side of your system.

### **WHAT IS THE DC LINK CAPACITANCE?**

The DC link capacitance is 20 microfarad (uF).

## ENVIRONMENTAL PROTECTION

### CLIMATE

SAE J1455-4.1.3 Temperature Cycle  
SAE J1455-4.1.3 Thermal Shock  
SAE J1455-4.1.3 Thermal Stress  
SAE J1455-4.2 Humidity  
SAE J1455-4.3 Salt Spray Atmosphere  
SAE J1455-4.3.3 Immersion Testing  
SAE J1455-4.4 High Exposure Splash Testing  
SAE J1455-4.5 Steam Cleaning and Pressure Washing

### EMI/EMC

EIC 61000-6-4 Radiated Emissions  
IEC 61000-6-2 Industrial Immunity  
FCC Part 15B Class A  
CISPR 25  
ISO 11452-2 RI  
ISO 11452-4 BCI  
ISO 10605 ESD  
ISO 7637-2 3rd Edition transients (on 12vdc)

### MECHANICAL VIBRATION

SAE J1455-4.10 Swept Sine Vibration  
SAE J1455-4.10.4 Random Vibration  
SAE J1455-4.11 Mechanical Shock  
SAE J1455-4.11 Operational Shock / Harness Shock  
SAE J1455-4.12 Combined Environmental  
ISO 16750 Vibration

### ELECTRICAL

SAE J1455-4.13 Heavy-Duty Truck Electrical Environment

**Terzo Power Systems, LLC**

1235 Glenhaven Ct. Ste. 300 | El Dorado Hills, CA 95762  
916-245-9660 | [Info@TerzoPower.com](mailto:Info@TerzoPower.com) | [TerzoPower.com](https://www.terzopower.com)



**WARNING!** FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

THIS DOCUMENT AND OTHER INFORMATION FROM TERZO POWER SYSTEMS, LLC, ITS SUBSIDIARIES AND AUTHORIZED DISTRIBUTORS PROVIDE PRODUCT AND/OR SYSTEM OPTIONS FOR FURTHER INVESTIGATION BY USERS HAVING TECHNICAL EXPERTISE. IT IS IMPORTANT THAT YOU ANALYZE ALL ASPECTS OF YOUR APPLICATION, INCLUDING CONSEQUENCES OF ANY FAILURE, AND REVIEW THE INFORMATION CONCERNING THE PRODUCT OR SYSTEM IN THE CURRENT PRODUCT CATALOGUE. DUE TO THE VARIETY OF OPERATING CONDITIONS AND APPLICATIONS FOR THESE PRODUCTS OR SYSTEMS, THE USER, THROUGH ITS OWN ANALYSIS AND TESTING, IS SOLELY RESPONSIBLE FOR MAKING THE FINAL SELECTION OF THE PRODUCTS AND SYSTEMS AND ASSURING THAT ALL PERFORMANCE, SAFETY AND WARNING REQUIREMENTS OF THE APPLICATION ARE MET. THE PRODUCTS DESCRIBED HEREIN, INCLUDING WITHOUT LIMITATION, PRODUCT FEATURES, SPECIFICATIONS, DESIGNS, AVAILABILITY AND PRICING, ARE SUBJECT TO CHANGE BY TERZO POWER SYSTEMS, LLC AND ITS SUBSIDIARIES AT ANY TIME WITHOUT NOTICE.



**WARNING!**

**WARNING: THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. FOR MORE INFORMATION, GO TO [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV)**